

How to read this list:	
Mark	Description
√	Function is supported.
*	Function is added or developed newly

V30/PC-MAX Function List													
Automaker:				HYUNDAI									
Software Version:				V3.2									
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
HYUNDAI	ASIA	2006-	ATOS F/LIFT		1.UNLEAD 1.0L GEN	ENGINE L4-SOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2006-	ATOS F/LIFT		2.UNLEAD 1.1L GEN	ENGINE L4-SOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2006-	ATOS F/LIFT		3.UNLEAD EOBD	ENGINE L4-SOHC		√	√	√	√	√	
HYUNDAI	ASIA	2006-	ATOS F/LIFT			ENGINE L4-SOHC							
HYUNDAI	ASIA	2006-	ATOS F/LIFT		4.UNLEAD MEX	ENGINE L4-SOHC		√	√	√	√	√	
HYUNDAI	ASIA	2006-	ATOS F/LIFT			ENGINE L4-SOHC							
HYUNDAI	ASIA	2006-	ATOS F/LIFT		5.LEAD 1.0L ALL	ENGINE L4-SOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	2006-	ATOS F/LIFT		6.LEAD 1.1L ALL	ENGINE L4-SOHC		√	√	√	√	√	1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	2006-	ATOS F/LIFT			AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	2006-	ATOS F/LIFT			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	2006-	ATOS F/LIFT			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	2006-	ATOS F/LIFT			IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	04-05	ATOS F/LIFT		1.UNLEAD GEN	ENGINE L4-SOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	04-05	ATOS F/LIFT		2.UNLEAD EOBD	ENGINE L4-SOHC		√	√	√	√	√	
HYUNDAI	ASIA	04-05	ATOS F/LIFT			ENGINE L4-SOHC							
HYUNDAI	ASIA	04-05	ATOS F/LIFT		3.UNLEAD MEX	ENGINE L4-SOHC		√	√	√	√	√	
HYUNDAI	ASIA	04-05	ATOS F/LIFT			ENGINE L4-SOHC							
HYUNDAI	ASIA	04-05	ATOS F/LIFT		4.LEAD ALL	ENGINE L4-SOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	04-05	ATOS F/LIFT			AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	04-05	ATOS F/LIFT			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	04-05	ATOS F/LIFT			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION

HYUNDAI	ASIA	04-05	ATOS F/LIFT			IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	98-03	ATOS		1.UNLEAD GEN	ENGINE L4-SOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	98-03	ATOS		2.UNLEAD EOBD	ENGINE L4-SOHC		√	√	√	√		
HYUNDAI	ASIA	98-03	ATOS		3.UNLEAD MEX	ENGINE L4-SOHC		√	√	√	√		
HYUNDAI	ASIA	98-03	ATOS		4.UNLEAD IMM	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	98-03	ATOS		5.LEAD ALL	ENGINE L4-SOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	98-03	ATOS			AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	98-03	ATOS			SAT			√	√	√		1.LEARNING MODE
HYUNDAI	ASIA	98-03	ATOS			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	2.AIR BLEEDING MODE
HYUNDAI	ASIA	98-03	ATOS			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	98-03	ATOS			IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2006-	GETZ		1.UNLEAD GEN	ENGINE(GASOLINE)		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GETZ		2.LEAD ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	2006-	GETZ		3.UNLEAD EOBD	ENGINE(GASOLINE)		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GETZ			ENGINE-DIESEL		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GETZ			AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	2006-	GETZ			ABS/ESP		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GETZ			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION
HYUNDAI	ASIA	2006-	GETZ		1.GASOLINE	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2006-	GETZ		2.DIESEL	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2006-	GETZ			ELEC.POWER STEERING		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GETZ			CODE SAVING							√
HYUNDAI	ASIA	03-05	GETZ		1.UNLEAD GEN	ENGINE(GASOLINE)		√	√	√	√		
HYUNDAI	ASIA	03-05	GETZ		2.LEAD ALL	ENGINE(GASOLINE)		√	√	√	√		1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	03-05	GETZ		3.UNLEAD EOBD	ENGINE(GASOLINE)		√	√	√	√		
HYUNDAI	ASIA	03-05	GETZ			ENGINE-DIESEL		√	√	√	√	√	
HYUNDAI	ASIA	03-05	GETZ			AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	03-05	GETZ			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	03-05	GETZ			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION

HYUNDAI	ASIA	03-05	GETZ		1.GASOLINE	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	03-05	GETZ		2.DIESEL	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4LIMP HOME MODE
HYUNDAI	ASIA	03-05	GETZ			ELEC.POWER STEERING		√	√	√	√	√	
HYUNDAI	ASIA	03-05	GETZ			CODE SAVING							√
HYUNDAI	ASIA	2006-	ACCENT(MC)		1.UNLEAD 1.6L(CVVT)GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2006-	ACCENT(MC)		2.UNLEAD 1.6L(CVVT)EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2006-	ACCENT(MC)		3.LEAD 1.6L(CVVT)ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2006-	ACCENT(MC)		4.UNLEAD 1.4L(DOHC)GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2006-	ACCENT(MC)		5.UNLEAD 1.4L(DOHC)EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2006-	ACCENT(MC)		6.LEAD 1.4L(DOHC)ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2006-	ACCENT(MC)			ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2006-	ACCENT(MC)		1.GASOLINE(A4AF3)	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2006-	ACCENT(MC)		2.DIESEL(A4CF2)	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2006-	ACCENT(MC)			ABS/ESP		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	2006-	ACCENT(MC)			SRS-AIRBAG		√	√	√	√	√	
HYUNDAI	ASIA	2006-	ACCENT(MC)			ELEC.POWER STEERING		√	√	√	√	√	
HYUNDAI	ASIA	2006-	ACCENT(MC)			FULL AUTO AIR/CON.		√	√	√	√	√	
HYUNDAI	ASIA	2006-	ACCENT(MC)			IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE 5.SMAR TRA NEUTRAL
HYUNDAI	ASIA	2006-	ACCENT(MC)			CODE SAVING							√
HYUNDAI	ASIA	03-06	ACCENT		1.UNLEAD GEN	ENGINE(GASOLINE)		√	√	√	√	√	
HYUNDAI	ASIA	03-06	ACCENT		2.LEAD ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	03-06	ACCENT		3.UNLEAD EOBD	ENGINE(GASOLINE)		√	√	√	√	√	
HYUNDAI	ASIA	03-06	ACCENT		4.ULEAD 03MY OBD-II	ENGINE(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.EVAP.TEST(DMTL TEST)
HYUNDAI	ASIA	03-06	ACCENT		5.ULEAD 04MY OBD-II	ENGINE(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.EVAP.TEST(DMTL TEST)
HYUNDAI	ASIA	03-06	ACCENT			ENGINE-DIESEL		√	√	√	√	√	
HYUNDAI	ASIA	03-06	ACCENT			AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	03-06	ACCENT			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	03-06	ACCENT		1.SRE-LC/HMC	SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	03-06	ACCENT		2.SRE-SMART(DUAL STAGE)	SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION

HYUNDAI	ASIA	03-06	ACCENT		1.GASOLINE	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	03-06	ACCENT		2.DIESEL	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	03-06	ACCENT			CODE SAVING							√
HYUNDAI	ASIA	00-02	ACCENT		1.LEAD ALL	ENGINE L4-SOHC			√	√	√		1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	00-02	ACCENT		2.UNLEAD GEN	ENGINE L4-SOHC		√	√	√	√		
HYUNDAI	ASIA	00-02	ACCENT		3.UNLEAD EOBD	ENGINE L4-SOHC		√	√	√	√		
HYUNDAI	ASIA	00-02	ACCENT		4.UNLEAD OBD-II	ENGINE L4-SOHC		√	√	√	√		1.FREEZE FRAME DATA 2.EVAP.TEST(DMTL TEST)
HYUNDAI	ASIA	00-02	ACCENT		1.LEAD ALL	ENGINE L4-DOHC		√	√	√	√		1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	00-02	ACCENT		2.UNLEAD GEN	ENGINE L4-DOHC		√	√	√	√		
HYUNDAI	ASIA	00-02	ACCENT		3.UNLEAD EOBD	ENGINE L4-DOHC		√	√	√	√		
HYUNDAI	ASIA	00-02	ACCENT		4.UNLEAD OBD-II	ENGINE L4-DOHC		√	√	√	√		1.FREEZE FRAME DATA 2.EVAP.TEST(DMTL TEST)
HYUNDAI	ASIA	00-02	ACCENT			ENGINE-DIESEL		√	√	√	√	√	
HYUNDAI	ASIA	00-02	ACCENT			AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	00-02	ACCENT			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	00-02	ACCENT			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	00-02	ACCENT		1.GASOLINE	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	00-02	ACCENT		2.DIESEL	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		1.UNLEAD 1.5L 95MY	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		2.UNLEAD 1.5L 96-98MY	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		3.UNLEAD 1.5L IMM	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		4.LEAD 1.5L 95MY	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		5.LEAD 1.5L 96-98MY	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		6.UNLEAD 96-97MY OBD- II	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		7. UNLEAD 98-99MY OBD- II	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		1.UNLEAD 1.5 95-7MY MAF	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		2.UNLEAD 1.5L 97MY IMM	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		3.UNLEAD1.5L98-99MY IMM	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		4.UNLEAD 1.5L 97-98MY MAP	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	95-99	ACCENT(EXCEL)		5.UNLEAD 96-97MY IMM	ENGINE L4-DOHC			√	√	√	√	

HYUNDAI	ASIA	95-99	ACCENT(EXCEL)			AUTOMATIC TRANSAXLE								
HYUNDAI	ASIA	90-94	EXCEL			ENGINE L4-SOHC		√	√	√				
HYUNDAI	ASIA	90-94	EXCEL			AUTOMATIC TRANSAXLE		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		1.UNLEAD 94-96MY GEN	ENGINE L4-SOHC		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		2.UNLEAD 92-94MY ALL	ENGINE L4-SOHC		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		3.UNLEAD 91-92MY ALL	ENGINE L4-SOHC		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		4.UNLEAD 94-96MY FED	ENGINE L4-SOHC		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		5.UNLEAD 94-96MY CAL	ENGINE L4-SOHC		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		6.LEAD 93-96MY ALL	ENGINE L4-SOHC		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		1.UNLEAD 94-96MY GEN	ENGINE L4-DOHC TURBO		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		2.UNLEAD 92-94MY ALL	ENGINE L4-DOHC TURBO		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE		3.UNLEAD 92MY KOR	ENGINE L4-DOHC TURBO		√	√					
HYUNDAI	ASIA	91-96	SCOUPE			AUTOMATIC TRANSAXLE		√	√	√				
HYUNDAI	ASIA	91-96	SCOUPE			CRUISE CONTROL		√	√	√				
HYUNDAI	ASIA	2002-	MATRIX		1.LEAD 1.6L ALL	ENGINE(GASOLINE)		√	√	√	√			1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	2002-	MATRIX		2.UNLEAD 1.6L EGN	ENGINE(GASOLINE)		√	√	√	√			
HYUNDAI	ASIA	2002-	MATRIX		3.UNLEAD 1.6L EOBD	ENGINE(GASOLINE)		√	√	√	√			
HYUNDAI	ASIA	2002-	MATRIX		4.LEAD 1.8L ALL	ENGINE(GASOLINE)		√	√	√	√	√		1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	2002-	MATRIX		5.UNLEAD 1.8L EGN	ENGINE(GASOLINE)		√	√	√	√	√		1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	2002-	MATRIX		6.UNLEAD 1.8L EOBD	ENGINE(GASOLINE)		√	√	√	√	√		1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	2002-	MATRIX		1. 1.5 D-ENGINE	ENGINE(DIESEL)		√	√	√	√	√		
HYUNDAI	ASIA	2002-	MATRIX		2. 1.5 U-ENGINE	ENGINE(DIESEL)		√	√	√	√	√		
HYUNDAI	ASIA	2002-	MATRIX			AUTOMATIC TRANSAXLE		√	√	√	√	√		
HYUNDAI	ASIA	2002-	MATRIX			ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√		1.AIR BLEEDING MODE
HYUNDAI	ASIA	2002-	MATRIX			SRS-AIRBAG		√	√	√				1.CRASHING INFORMATION
HYUNDAI	ASIA	2002-	MATRIX			TRACTION CONTROL SYSTEM			√	√	√	√		
HYUNDAI	ASIA	2002-	MATRIX		1.1.6L(GASOLINE)	IMMOBILIZER					√			1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2002-	MATRIX		2.1.8L(GASOLINE)	IMMOBILIZER					√			1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2002-	MATRIX		3.DIESEL	IMMOBILIZER					√			1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2002-	MATRIX			8.CODE SAVING								√

HYUNDAI	ASIA	2007-	ELANTRA(HD)		1.LEAD 1.6L GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		2.UNLEAD 1.6L EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		3.LEAD 1.6L ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		4.UNLEAD 1.6L OBD- II	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		5.UNLEAD 2.0L GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		6.UNLEAD 2.0L EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		7.LEAD 2.0L ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		8.UNLEAD 2.0L OBD- II	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)			ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2007-	ELANTRA(HD)		1.1.6L GASOLINE	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESETTING AUTO T/A VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		2.2.0L GASOLINE	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESETTING AUTO T/A VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)		3.1.6 DIESEL	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESETTING AUTO T/A VALUES
HYUNDAI	ASIA	2007-	ELANTRA(HD)			ABS/ESP		√	√	√	√	√	
HYUNDAI	ASIA	2007-	ELANTRA(HD)		1.ACU(GEN)	SRS-AIRBAG		√	√	√			
HYUNDAI	ASIA	2007-	ELANTRA(HD)		2.ACU(NAS)	SRS-AIRBAG		√	√	√			
HYUNDAI	ASIA	2007-	ELANTRA(HD)			FULL AUTO AIR/CON.		√	√	√	√	√	
HYUNDAI	ASIA	2007-	ELANTRA(HD)			ELEC.POWER STEERING		√	√	√	√	√	
HYUNDAI	ASIA	2007-	ELANTRA(HD)		1.GENERAL	BODY CONTROL MODULE		√			√	√	
HYUNDAI	ASIA	2007-	ELANTRA(HD)		2.NAS			√			√	√	
HYUNDAI	ASIA	2007-	ELANTRA(HD)		GASOLINE	IMMOBILIZER				*		*	*1.PASSWORD TEACHING/CHANGINEG *2. TEACHING *3. NEUTRAL MODE *4. LIMP HOME MODE *5. SMARTRA NEUTEAI
HYUNDAI	ASIA	2007-	ELANTRA(HD)		DIESEL					*		*	1.PASSWORD TEACHING/CHANGINEG *2. TEACHING *3.NEUTRAL MODE *4. LIMP HOME MODE *5. SMARTRA NEUTEAL
HYUNDAI	ASIA	2007-	ELANTRA(HD)			CODE SAVING							√
HYUNDAI	ASIA	04-06	ELANTRA		1.LEAD 1.6L ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	04-06	ELANTRA		2.UNLEAD 1.6L EGN	ENGINE(GASOLINE)		√	√	√	√	√	1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	04-06	ELANTRA		3.UNLEAD 1.6L EOBD	ENGINE(GASOLINE)		√	√	√	√	√	
HYUNDAI	ASIA	04-06	ELANTRA		4.LEAD 1.8/2.0L ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	04-06	ELANTRA		5.UNLEAD 1.8/2.0L(-CVVT) EGN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	04-06	ELANTRA		6.UNLEAD 1.8/2.0L(+CVVT) EGN	ENGINE(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	04-06	ELANTRA		7.UNLEAD 1.8/2.0L(CVVT) EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION

HYUNDAI	ASIA	04-06	ELANTRA		8.UNLEAD 2.0L(CVVVT) OBD-II	ENGINE(GASOLINE)		√	√	√	√	√	1.READINESS TEST 2.FREEZE FRAME DATA 3.EVAP.TEST(DMTL TEST) 4.RESETTING ADAPTIVE VALUES 5.VERSION CONFIGURATION
HYUNDAI	ASIA	04-06	ELANTRA			ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	04-06	ELANTRA		1.1.6L	AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	04-06	ELANTRA		2.1.8/2.0L(SIEMENS PCM)	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	04-06	ELANTRA			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	04-06	ELANTRA			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION
HYUNDAI	ASIA	04-06	ELANTRA			TRACTION CONTROL SYSTEM			√	√	√	√	
HYUNDAI	ASIA	04-06	ELANTRA		1.1.6L(GASOLINE)	IMMOBILIZER						√	1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	04-06	ELANTRA		2.1.8/2.0(GASOLINE)	IMMOBILIZER						√	1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	04-06	ELANTRA		3.DIESEL	IMMOBILIZER						√	1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 3.LIMP HOME MODE
HYUNDAI	ASIA	04-06	ELANTRA			CODE SAVING							√
HYUNDAI	ASIA	01-03	ELANTRA		1.LEAD 1.6L ALL	ENGINE(GASOLINE)			√	√	√	√	1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	01-03	ELANTRA		2.UNLEAD 1.6L EGN	ENGINE(GASOLINE)		√	√	√	√	√	
HYUNDAI	ASIA	01-03	ELANTRA		3.UNLEAD 1.6L EOBD	ENGINE(GASOLINE)		√	√	√	√	√	
HYUNDAI	ASIA	01-03	ELANTRA		4.LEAD 1.8/2.0L ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-03	ELANTRA		5.UNLEAD 1.8/2.0L EGN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-03	ELANTRA		6.UNLEAD 1.8/2.0L EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-03	ELANTRA		7.UNLEAD 2.0L(-SULEV) OBD-II	ENGINE(GASOLINE)		√	√	√	√	√	1.READINESS TEST 2.FREEZE FRAME DATA 3.EVAP.TEST(DMTL TEST) 4.RESETTING ADAPTIVE VALUES 5.VERSION CONFIGURATION

HYUNDAI	ASIA	01-03	ELANTRA		8.UNLEAD 2.0L(+SULEV) OBD-II	ENGINE(GASOLINE)		√	√	√	√	√	1.READINESS TEST 2.FREEZE FRAME DATA 3.EVAP.TEST(DMTL TEST) 4.RESETTING ADAPTIVE VALUES 5.VERSION CONFIGURATION
HYUNDAI	ASIA	01-03	ELANTRA			ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	01-03	ELANTRA		1. 1.6L	AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	01-03	ELANTRA		2. 1.8/2.0L(MELCO TCM)	AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	01-03	ELANTRA		3. 1.8/2.0L(SIEMENS PCM)	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	01-03	ELANTRA			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	01-03	ELANTRA			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION
HYUNDAI	ASIA	01-03	ELANTRA			TRACTION CONTROL SYSTEM			√	√	√	√	
HYUNDAI	ASIA	01-03	ELANTRA		1.1.6L(GASOLINE)	IMMOBILIZER						√	1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	01-03	ELANTRA		2.1.8/2.0(GASOLINE)	IMMOBILIZER						√	1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	01-03	ELANTRA		3.DIESEL	IMMOBILIZER						√	1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	01-03	ELANTRA			CODE SAVING							√
HYUNDAI	ASIA	96-00	ELANTRA		1.UNLEAD 1.5L 96MY IMM	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	96-00	ELANTRA		2.UNLEAD1.5 97-98MY KOR	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	96-00	ELANTRA		3.UNLEAD 96MY OBD- II	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	96-00	ELANTRA		4.UNLEAD 97MY OBD- II	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	96-00	ELANTRA		5.UNLEAD 98MY OBD- II	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	96-00	ELANTRA		6.UNLEAD 99-00MY OBD- II	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	96-00	ELANTRA		1.UNLEAD 1.5L GEN	ENGINE L4-SOHC			√	√			
HYUNDAI	ASIA	96-00	ELANTRA		2.UNLEAD 1.5L IMM	ENGINE L4-SOHC			√	√			
HYUNDAI	ASIA	96-00	ELANTRA		3.LEAD 1.5L ALL	ENGINE L4-SOHC			√	√			
HYUNDAI	ASIA	96-00	ELANTRA		1. ~99MY(A4BF1)	AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	96-00	ELANTRA		2. 2000MY(A4BF2)	AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	96-00	ELANTRA			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	96-00	ELANTRA			SRS-AIRBAG			√	√			1.CRASHING INFORMATION
HYUNDAI	ASIA	96-00	ELANTRA			CRUISE CONTROL			√	√			
HYUNDAI	ASIA	96-00	ELANTRA			ELEC.POWER STEERING			√	√			

HYUNDAI	ASIA	96-00	ELANTRA		1. GASOLINE	IMMOBILIZER						√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	96-00	ELANTRA		2. DIESEL	IMMOBILIZER						√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	92-95	ELANTRA			ENGINE L4-SOHC			√	√	√			
HYUNDAI	ASIA	92-95	ELANTRA			ENGINE L4-DOHC			√	√	√			
HYUNDAI	ASIA	92-95	ELANTRA			AUTOMATIC TRANSAXLE			√	√	√			
HYUNDAI	ASIA	92-95	ELANTRA			ANTI-LOCK BRAKE SYSTEM			√	√	√			
HYUNDAI	ASIA	92-95	ELANTRA			SRS-AIRBAG			√	√				1.CRASHING INFORMATION
HYUNDAI	ASIA	92-95	ELANTRA			CRUISE CONTROL			√	√				
HYUNDAI	ASIA	02-06	HD COUPE		1.LEAD 1.6L ALL	ENGINE			√	√	√			1.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	02-06	HD COUPE		2.UNLEAD 1.6L EGN	ENGINE		√	√	√	√			
HYUNDAI	ASIA	02-06	HD COUPE		3.UNLEAD 1.6L EOBD	ENGINE		√	√	√	√			
HYUNDAI	ASIA	02-06	HD COUPE		4.LEAD 2.0L ALL	ENGINE		√	√	√	√	√		1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		5.UNLEAD 2.0L(-CVVT) EGN	ENGINE		√	√	√	√	√		1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		6.UNLEAD 2.0L(+CVVT) EGN	ENGINE		√	√	√	√	√		1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		7.UNLEAD 2.0L(-CVVT) EOBD	ENGINE		√	√	√	√	√		1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		8.UNLEAD 2.0L(+CVVT) EOBD	ENGINE		√	√	√	√	√		1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		9.UNLEAD 2.0L(-CVVT) OBD-II	ENGINE		√	√	√	√	√		1.READINESS TEST 2.FREEZE FRAME DATA 3.EVAP.TEST(DMTL TEST) 4.RESETTING ADAPTIVE VALUES 5.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		10.UNLEAD 2.0L(CVVT) OBD-II	ENGINE		√	√	√	√	√		1.FREEZE FRAME DATA 2.EVAP.TEST(DMTL TEST) 3.RESETTING ADAPTIVE VALUES 4.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		11.LEAD 2.7L ALL	ENGINE		√	√	√	√	√		1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION

HYUNDAI	ASIA	02-06	HD COUPE		12.UNLEAD 2.7L GEN	ENGINE		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		13.UNLEAD 2.7L(Ti O2S) EOBD	ENGINE		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		14.UNLEAD 2.7L(Zr O2S) EOBD	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		15.UNLEAD 2.7L(Ti O2S) OBD-II	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		16.UNLEAD 2.7L(Zr O2S) OBD-II	ENGINE		√	√	√	√	√	1.READINESS TEST 2.FREEZE FRAME DATA 3.EVAP.TEST(DMTL TEST) 4.RESETTING ADAPTIVE VALUES 5.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE			AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	02-06	HD COUPE			ABS/ESP		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	02-06	HD COUPE			SRS-AIRBAG		√	√	√			
HYUNDAI	ASIA	02-06	HD COUPE			TRACTION CONTROL SYSTEM			√	√	√	√	
HYUNDAI	ASIA	02-06	HD COUPE		1. UNLEAD 1.6/2.0L IMM	IMMOBILIZER		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	02-06	HD COUPE		2. UNLEAD 2.7L IMM	IMMOBILIZER			√	√			
HYUNDAI	ASIA	02-06	HD COUPE			AHLS		√	√	√	√		
HYUNDAI	ASIA	02-06	HD COUPE			CODE SAVING							√
HYUNDAI	ASIA	97-01	HD COUPE		1.EOBD 2001MY	ENGINE L4-DOHC		√	√	√	√		
HYUNDAI	ASIA	97-01	HD COUPE		2.UNLEAD 97MY OBD-II	ENGINE L4-DOHC			√	√	√		
HYUNDAI	ASIA	97-01	HD COUPE		1.97-99MY	AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	97-01	HD COUPE		2.2000MY~	AUTOMATIC TRANSAXLE			√	√	√	√	
HYUNDAI	ASIA	97-01	HD COUPE			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	97-01	HD COUPE		1. 97-99MY	SRS-AIRBAG			√	√			1.CRASHING INFORMATION
HYUNDAI	ASIA	97-01	HD COUPE		2. 2000MY~	SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	97-01	HD COUPE			CRUISE CONTROL			√	√			
HYUNDAI	ASIA	97-01	HD COUPE			ELEC.POWER STEERING			√	√			
HYUNDAI	ASIA	97-01	HD COUPE			IMMOBILIZER			√	√			
HYUNDAI	ASIA	2005-	SONATA		1.UNLEAD 2.0/2.4L-ETS GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	2005-	SONATA		2. UNLEAD 2.0/2.4L-ETS EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	2005-	SONATA		3. LEAD 2.0/2.4L-ETS ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION

HYUNDAI	ASIA	2005-	SONATA		4. UNLEAD 2.0/2.4L+ETS GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	2005-	SONATA			ENGINE(GASOLINE)							
HYUNDAI	ASIA	2005-	SONATA		5. UNLEAD 2.0/2.4L+ETS EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	2005-	SONATA			ENGINE(GASOLINE)							
HYUNDAI	ASIA	2005-	SONATA		6. LEAD 2.0/2.4L+ETS ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	2005-	SONATA			ENGINE(GASOLINE)							
HYUNDAI	ASIA	2005-	SONATA		7.UNLEAD 3.3L GEN	ENGINE(GASOLINE)			√	√	√	√	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2005-	SONATA		8.UNLEAD 3.3L EOBD	ENGINE(GASOLINE)							
HYUNDAI	ASIA	2005-	SONATA		9.LEAD 3.3L ALL	ENGINE(GASOLINE)			√	√	√	√	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2005-	SONATA		10.UNLEAD 3.3L OBD-II	ENGINE(GASOLINE)			√	√	√	√	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2005-	SONATA		1.EURO-4VGT(CAN)	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2005-	SONATA		1. 2.0/2.4	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2005-	SONATA		2. 3.3	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2005-	SONATA		3.EURO-4 VGT(CAN)	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2005-	SONATA			ABS/ESP		√	√	√	√	√	
HYUNDAI	ASIA	2005-	SONATA			SRS-AIRBAG		√	√	√			1.PASS.AIRBAG REALTIME INFO
HYUNDAI	ASIA	2005-	SONATA			ELEC.CONTROL SUSPENSION			√	√	√	√	
HYUNDAI	ASIA	2005-	SONATA		1.GASOLINE	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2005-	SONATA		2.DIESEL	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2005-	SONATA			ELEC.POWER STEERING		√	√	√	√		
HYUNDAI	ASIA	2005-	SONATA			FULL AUTO AIR/CON.		√	√	√	√	√	
HYUNDAI	ASIA	2005-	SONATA			BODY CONTROL MODULE		√			√	√	
HYUNDAI	ASIA	2005-	SONATA			CODE SAVING							√
HYUNDAI	ASIA	99-04	SONATA		1.UNLEAD GEN	ENGINE L4-DOHC		√	√	√	√	√	
HYUNDAI	ASIA	99-04	SONATA		2.UNLEAD IMM	ENGINE L4-DOHC		√	√	√	√	√	
HYUNDAI	ASIA	99-04	SONATA		3.LEAD ALL	ENGINE L4-DOHC		√	√	√	√	√	
HYUNDAI	ASIA	99-04	SONATA		4.UNLEAD EOBD	ENGINE L4-DOHC			√	√	√	√	
HYUNDAI	ASIA	99-04	SONATA		5.UNLEAD OBD-II	ENGINE L4-DOHC		√	√	√	√	√	1.FREEZE FRAME DATA 2.EVAP.TEST(DMTL TEST)
HYUNDAI	ASIA	99-04	SONATA		6.LPG(-2002) ALL	ENGINE L4-DOHC		√	√	√	√	√	
HYUNDAI	ASIA	99-04	SONATA		7.LPG(2003-) ALL	ENGINE L4-DOHC		√	√	√	√	√	

HYUNDAI	ASIA	99-04	SONATA		1.UNLEAD GEN	ENGINE V6-DOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	99-04	SONATA		2.UNLEAD IMM	ENGINE V6-DOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	99-04	SONATA		3.LEAD ALL	ENGINE V6-DOHC		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
HYUNDAI	ASIA	99-04	SONATA		4.UNLEAD (Ti O2S) EOBD	ENGINE V6-DOHC		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	99-04	SONATA		5.UNLEAD (Zr O2S) EOBD	ENGINE V6-DOHC		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	99-04	SONATA		6.UNLEAD (Ti O2S) OBD-II	ENGINE V6-DOHC		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	99-04	SONATA		7.UNLEAD (Zr O2S) OBD-II	ENGINE V6-DOHC		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	99-04	SONATA			AUTOMATIC TRANSAXLE		√	√	√	√		
HYUNDAI	ASIA	99-04	SONATA		1.CTC TYPE(99-02MY)	ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	99-04	SONATA		2.BOSCH TYPE(03MY-)			√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	99-04	SONATA		1.1999~2001MY	SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	99-04	SONATA		2.F/LIFT	SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	99-04	SONATA			ELEC.POWER STEERING			√	√			
HYUNDAI	ASIA	99-04	SONATA		1.CTC TYPE(99-02)	TRACTION CONTROL			√	√	√	√	
HYUNDAI	ASIA	99-04	SONATA		2.BOSCH TYPE(03MY-)	TRACTION CONTROL			√	√	√	√	
HYUNDAI	ASIA	99-04	SONATA			IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	99-04	SONATA			AHLS		√	√	√	√		√
HYUNDAI	ASIA	99-04	SONATA		1.WITHOUT IMMOBILIZER	CODE SAVING(NEW EF)							√
HYUNDAI	ASIA	99-04	SONATA		2.WITH IMMOBILIZER	CODE SAVING(NEW EF)							
HYUNDAI	ASIA	94-98	SONATA		1.UNLEAD 1.8L ALL	ENGINE L4-SOHC			√	√	√		
HYUNDAI	ASIA	94-98	SONATA		2.UNLEAD 2.0L ALL	ENGINE L4-SOHC			√	√	√		
HYUNDAI	ASIA	94-98	SONATA		3.LEAD 1.8L ALL	ENGINE L4-SOHC			√	√	√		
HYUNDAI	ASIA	94-98	SONATA		4.LEAD 2.0L ALL	ENGINE L4-SOHC			√	√	√		
HYUNDAI	ASIA	94-98	SONATA		5.UNLEAD 97MY OBD-II	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	94-98	SONATA		6.UNLEAD 98MY OBD-II	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	94-98	SONATA		1.UNLEAD 1.8L ALL	ENGINE L4-DOHC			√	√	√		
HYUNDAI	ASIA	94-98	SONATA		2.UNLEAD 2.0L ALL	ENGINE L4-DOHC			√	√	√		

HYUNDAI	ASIA	94-98	SONATA		3.LEAD 2.0L ALL	ENGINE L4-DOHC			√	√	√			
HYUNDAI	ASIA	94-98	SONATA		4.UNLEAD 97MY OBD-II	ENGINE L4-DOHC			√	√	√			
HYUNDAI	ASIA	94-98	SONATA		5.UNLEAD 98MY OBD-II	ENGINE L4-DOHC			√	√	√	√		
HYUNDAI	ASIA	94-98	SONATA		1.UNLEAD 3.0L ALL	ENGINE V6-DOHC			√	√	√			
HYUNDAI	ASIA	94-98	SONATA		2.LEAD 3.0L ALL	ENGINE V6-DOHC			√	√	√			
HYUNDAI	ASIA	94-98	SONATA		3.UNLEAD 97MY OBD-II	ENGINE V6-DOHC			√	√	√	√		
HYUNDAI	ASIA	94-98	SONATA		4.UNLEAD 98MY OBD-II	ENGINE V6-DOHC			√	√	√	√		
HYUNDAI	ASIA	94-98	SONATA			AUTOMATIC TRANSAXLE			√	√	√			
HYUNDAI	ASIA	94-98	SONATA			ANTI-LOCK BRAKE SYSTEM			√	√	√			
HYUNDAI	ASIA	94-98	SONATA			SRS-AIRBAG			√	√			1.CRASHING INFORMATION	
HYUNDAI	ASIA	94-98	SONATA			IMMOBILIZER			√	√				
HYUNDAI	ASIA	94-98	SONATA			ELEC.CONTROL SUSPENSION			√	√	√			
HYUNDAI	ASIA	94-98	SONATA			CRUISE CONTROL			√	√				
HYUNDAI	ASIA	89-93	SONATA			ENGINE L4-SOHC			√	√	√			
HYUNDAI	ASIA	89-93	SONATA			ENGINE L4-DOHC			√	√	√			
HYUNDAI	ASIA	89-93	SONATA			ENGINE V6-DOHC			√	√	√			
HYUNDAI	ASIA	89-93	SONATA			AUTOMATIC TRANSAXLE			√	√	√			
HYUNDAI	ASIA	89-93	SONATA			ANTI-LOCK BRAKE SYSTEM			√	√	√			
HYUNDAI	ASIA	89-93	SONATA			CRUISE CONTROL			√	√				
HYUNDAI	ASIA	99-05	XG		1.LEAD ALL	ENGINE V6-DOHC			√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	99-05	XG		2.LEAD(+ETS) ALL	ENGINE V6-DOHC			√	√	√	√	√	
HYUNDAI	ASIA	99-05	XG		3.UNLEAD GEN	ENGINE V6-DOHC			√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	99-05	XG		4.UNLEAD(+ETS) GEN	ENGINE V6-DOHC			√	√	√	√	√	
HYUNDAI	ASIA	99-05	XG		5.UNLEAD(Ti O2S) IMM	ENGINE V6-DOHC			√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	99-05	XG		6.UNLEAD(Zr O2S) IMM	ENGINE V6-DOHC			√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	99-05	XG		7.UNLEAD(+ETS) IMM	ENGINE V6-DOHC			√	√	√	√	√	
HYUNDAI	ASIA	99-05	XG		8.UNLEAD(+ETS) OBD-II	ENGINE V6-DOHC			√	√	√	√	√	1.FREEZE FRAME DATA 2.EVAP.TEST(DMTL TEST)
HYUNDAI	ASIA	99-05	XG		1. 2.0/2.5L	AUTOMATIC TRANSAXLE			√	√	√	√	√	
HYUNDAI	ASIA	99-05	XG		2. 3.0/3.5L	AUTOMATIC TRANSAXLE			√	√	√	√	√	
HYUNDAI	ASIA	99-05	XG			ANTI-LOCK BRAKE SYSTEM				√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	99-05	XG		1. ~2002MY	SRS-AIRBAG			√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	99-05	XG		2. F/LIFT	SRS-AIRBAG			√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	99-05	XG											

HYUNDAI	ASIA	99-05	XG			TRACTION CONTROL SYSTEM			√	√	√	√	
HYUNDAI	ASIA	99-05	XG			ELEC.CONTROL SUSPENSION			√	√	√	√	
HYUNDAI	ASIA	99-05	XG			ELEC.POWER STEERING			√	√			
HYUNDAI	ASIA	99-05	XG			IMMOBILIZER			√	√			
HYUNDAI	ASIA	99-05	XG			AHLS		√	√	√	√		
HYUNDAI	ASIA	99-05	XG			CODE SAVING							√
HYUNDAI	ASIA	96-98	MARCIA			ENGINE L4-DOHC			√	√	√		
HYUNDAI	ASIA	96-98	MARCIA			ENGINE V6-DOHC			√	√	√		
HYUNDAI	ASIA	96-98	MARCIA			AUTOMATIC TRANSAXLE			√	√	√		
HYUNDAI	ASIA	96-98	MARCIA			ANTI-LOCK BRAKE SYSTEM			√	√	√		
HYUNDAI	ASIA	96-98	MARCIA			SRS-AIRBAG			√	√			1.CRASHING INFORMATION
HYUNDAI	ASIA	96-98	MARCIA			ELEC.CONTROL SUSPENSION			√	√	√		
HYUNDAI	ASIA	00-07	CENTENNIAL		1.UNLEAD 3.0L ALL	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		2.UNLEAD 3.0L(+ETS) ALL	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		3.UNLEAD 3.5L(+ETS) GEN	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		4.UNLEAD 3.5L(+ETS) EOBD	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA
HYUNDAI	ASIA	00-07	CENTENNIAL		5.LEAD 3.5L(+ETS) ALL	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		6.UNLEAD 4.5L GDI ALL	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		7.UNLEAD 4.5(+ETS) OBD-II	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		8.UNLEAD 4.5L MPI GEN	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		9.UNLEAD 4.5L MPI EOBD	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA
HYUNDAI	ASIA	00-07	CENTENNIAL		10.UNLEAD 4.5L MPI OBD-II	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA 2.EVAP.TEST(DMTL TEST)
HYUNDAI	ASIA	00-07	CENTENNIAL		11.LEAD 4.5L MPI ALL	ENGINE			√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		1. 3.0/3.5L	AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		2. 4.5L	AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		1.MELCO TYPE	VDC					√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		2.CTC TYPE(2002.09~)	VDC		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	00-07	CENTENNIAL		1. ITI TYPE	ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	00-07	CENTENNIAL		2. CTC TYPE(2002.09~)	ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	00-07	CENTENNIAL		1. ~2001MY(SDM-GH)	SRS-AIRBAG			√	√	√		1.CRASHING INFORMATION
HYUNDAI	ASIA	00-07	CENTENNIAL		2. 2002MY~(SRE-SMART)	SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	00-07	CENTENNIAL			IMMOBILIZER			√	√			
HYUNDAI	ASIA	00-07	CENTENNIAL		1. ECS	ELEC.CONTROL SUSPENSION			√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		2. ACTIVE ECS	ELEC.CONTROL SUSPENSION				√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		1. ITI TYPE	TRACTION CONTROL SYSTEM			√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL		2. CTC TYPE(2002.09~)	TRACTION CONTROL SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE

HYUNDAI	ASIA	00-07	CENTENNIAL			FULL AUTO AIR/CON.			√	√	√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL			LAN		√	√		√	√	
HYUNDAI	ASIA	00-07	CENTENNIAL			ELEC.POWER STEERING			√	√			
HYUNDAI	ASIA	00-07	CENTENNIAL			AHLS		√	√	√	√		
HYUNDAI	ASIA	00-07	CENTENNIAL			CODE SAVING							√
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		1.UNLEAD GEN	ENGINE(GASOLINE)			√	√	√	√	1.PCM AUTO DETECTION PESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		2.UNLEAD EOBD	ENGINE(GASOLINE)			√	√	√	√	1.PCM AUTO DETECTION PESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		3.LEAD ALL	ENGINE(GASOLINE)			√	√	√	√	1.PCM AUTO DETECTION PESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		4.UNLEAD OBD- II	ENGINE(GASOLINE)			√	√	√	√	1.PCM AUTO DETECTION PESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		1.EURO-4 VGT(CAN)	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		1.GASOLINE	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		2.DIESEL	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2006-	GRANDEUR(TG)			ABS/ESP		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		1.GENERAL	SRS-AIRBAG		√	√	√			1.PASS.AIRBAG REAL TIME INFO
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		2.NAS	SRS-AIRBAG		√	√	√			1.PASS.AIRBAG REAL TIME INFO
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		1.GASOLINE	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		2.DIESEL	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2006-	GRANDEUR(TG)			ELEC.CONTROL SUPERSON			√	√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)			FULL AUTO AIR/CON.		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		1.BODY CONTROL MODULE	BODY CONTROL MODULE		√	√	√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		2.DRIVER DOOR MODULE(DDM)	BODY CONTROL MODULE		√		√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		3.ASSIST DOOR MODULE(ADM)	BODY CONTROL MODULE		√		√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		4.IMS	BODY CONTROL MODULE		√		√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		5.TILTTELESCOPE(TILT)	BODY CONTROL MODULE		√		√	√	√	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		6.USER OPTION	BODY CONTROL MODULE							1.LOCK/UNLOCK ALARM 2.ARM/DISARM BY KEY 3.AUTO DOOR LOCK 4.GET INGET DOWN LINKAGE
HYUNDAI	ASIA	2006-	GRANDEUR(TG)			AHLS		√	√	√	√		
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		1. INTERFACE UNIT	SMART KEY SYSTEM		*	*	*	*	*	
HYUNDAI	ASIA	2006-	GRANDEUR(TG)		2. SMART KEY UNIT	SMART KEY SYSTEM		*	*	*	*	*	
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		1.UNLEAD 3.3L GEN	ENGINE			√	√	√	√	1.PCM AUTO DETECTION RESET
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		2.UNLEAD 3.3L EOBD	ENGINE			√	√	√	√	1.PCM AUTO DETECTION RESET
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		3.LEAD(+ETS) ALL	ENGINE			√	√	√	√	1.PCM AUTO DETECTION RESET
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06			AUTOMATIC TRANSAXLE			√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06			ABS/ESP		√	√	√	√	√	

HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		GENERAL	SRS-AIRBAG		√	√	√				1.PASS.AIRBAG REALTIME INFO
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		NAS	SRS-AIRBAG		√	√	√				1.PASS.AIRBAG REALTIME INFO 2.PODS RESET
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06			IMMOBILIZER					√			1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06			ELEC.POWER STEERING		√	√	√	√			
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06			FULL AUTO AIR/CON.		√	√	√	√	√		
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		1. BODY CONTROL MODULLE	BODY CONTROL MODULE		√	√	√	√	√		
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		2. DRIVER DOOR MODULE(PDMM)	BODY CONTROL MODULE		√		√	√	√		
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		3.ASSIST DOOR MODULE(ADM)	BODY CONTROL MODULE		√		√	√	√		
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		4.IMS	BODY CONTROL MODULE		√		√	√	√		
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		5.TILT&TELESCOPE(TILT)	BODY CONTROL MODULE		√		√	√	√		
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		6.USER OPTION	BODY CONTROL MODULE								1.LOCK/UNLOCK ALARM 2.ARM/DISARM BY KEY 3.AUTO DOOR LOCK 4.GET IN&GET DOWN LINKAGE
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		1. INTERFACE UNIT	SMART KEY SYSTEM		√	√	√	√	√		
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06		2. SMART KEY UNIT			√	√	√	√	√		
HYUNDAI	ASIA	99-05	GRANDEUR(TG)-06			AHLS		√	√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			ENGINE L4-SOHC			√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			ENGINE L4-DOHC			√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			ENGINE V6-DOHC			√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			ENGINE V6-DOHC			√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			AUTOMATIC TRANSAXLE			√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			ANTI-LOCK BRAKE SYSTEM			√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			SRS-AIRBAG			√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			ELEC.CONTROL SUSPENSION			√	√	√			
HYUNDAI	ASIA	94-98	GRANDEUR			FULLAUTO AIR/COM			√	√	√			
HYUNDAI	ASIA	89-93	GRANDEUR			ENGINE L4-SOHC			√	√	√			
HYUNDAI	ASIA	89-93	GRANDEUR			ENGINE V6-DOHC			√	√	√			
HYUNDAI	ASIA	89-93	GRANDEUR			AUTOMATIC TRANSAXLE			√	√	√			
HYUNDAI	ASIA	89-93	GRANDEUR			ELEC.CONTROL SUSPENSION			√	√	√			
HYUNDAI	ASIA	89-93	GRANDEUR			CRUISE CONTROL			√	√	√			
HYUNDAI	ASIA	94-01	H-100		1.UNLEAD 94-96MY ALL	ENGINE			√	√	√			
HYUNDAI	ASIA	94-01	H-100		2.UNLEAD 97-2000MY ALL	ENGINE			√	√				
HYUNDAI	ASIA	94-01	H-100		3.LEAD 94-96MY ALL	ENGINE			√	√	√			
HYUNDAI	ASIA	94-01	H-100		4.LEAD 97-2000MY ALL	ENGINE			√	√				
HYUNDAI	ASIA	94-01	H-100		5.LEAD 97-98MY ALL	ENGINE			√	√				
HYUNDAI	ASIA	94-01	H-100		6.ENGINE DIESEL	ENGINE			√	√	√	√		
HYUNDAI	ASIA	94-01	H-101			AUTOMATIC TRANSAXLE			√	√				
HYUNDAI	ASIA	04-06	H-100			ENGINE		√	√	√	√	√		

HYUNDAI	ASIA	04-06	H-100			AUTOMATIC TRANSAXLE			√	√			
HYUNDAI	ASIA	04-06	H-100			ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	2004-	H-100 TRUCK			ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	2004-	H-100 TRUCK			ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	2004-	H-100 TRUCK			CODE SAVING							√
HYUNDAI	ASIA	97-03	H-100		1.GASOLINE	ENGINE L4-SOHC			√	√	√		
HYUNDAI	ASIA	97-03	H-100		2.DIESEL	ENGINE L4-SOHC			√	√	√	√	
HYUNDAI	ASIA	97-03	H-100		3.FBM	ENGINE L4-SOHC			√	√			
HYUNDAI	ASIA	97-03	H-100			AUTOMATIC TRANSAXLE			√	√			
HYUNDAI	ASIA	2007-	H-1		1.UNLEAD GEN CAN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	H-1		2.UNLEAD EOBD CAN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	2007-	H-1		3.LEAD ALL CAN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	H-1		1.T/CHARGER(COVEC-F)	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2007-	H-1		2.CRDI(A-ENG) EURO-4(-CPF)	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2007-	H-1		3.CRDI(A-ENG) EURO-4(+CPF)	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2007-	H-1		1.GASOLINE	AUTOMATIC TRANSAXLE			√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2007-	H-1		2.T/CHARGER(COVEC-F)	AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	2007-	H-1		3.CRDI(A-ENG)EURO-4	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2007-	H-1			ABS/ESP		√	√	√	√	√	
HYUNDAI	ASIA	2007-	H-1			SRS-AIRBAG		√	√	√	√	√	
HYUNDAI	ASIA	2007-	H-1			FULL AUTO AIR/CON.		√	√	√	√	√	
HYUNDAI	ASIA	2007-	H-1			BODY CONTROL MODULE		√	√	√			
HYUNDAI	ASIA	2007-	H-1		1.GASOLINE CAN	IMMOBILIZER					√		1.PASSOWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2007-	H-1		2.T/CHARGER(COVEC-F)	IMMOBILIZER					√		1.PASSOWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2007-	H-1		3.CRDI(A-ENG) EURO-4	IMMOBILIZER					√		1.PASSOWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	98-06	H-1		1.UNLEAD 2.4L GEN	ENGINE-GASOLINE:2002MY~		√	√	√	√	√	1.FREEZE FRAME DATA
HYUNDAI	ASIA	98-06	H-1		2.UNLEAD 2.4L EOBD	ENGINE-GASOLINE:2002MY~		√	√	√	√	√	1.FREEZE FRAME DATA
HYUNDAI	ASIA	98-06	H-1		3.LEAD 2.4L ALL	ENGINE-GASOLINE:2002MY~		√	√	√	√	√	
HYUNDAI	ASIA	98-06	H-1			ENGINE-GASOLINE:~2001MY			√	√	√		
HYUNDAI	ASIA	98-06	H-1		1.T/CHARGER(COVEC-F)	ENGINE-DIESEL			√	√	√	√	
HYUNDAI	ASIA	98-06	H-1		2.T/C INTERCOOLER(COVEC)	ENGINE-DIESEL		√	√	√	√	√	
HYUNDAI	ASIA	98-06	H-1		3.CRDI(A-ENG)	ENGINE-DIESEL			√	√			

HYUNDAI	ASIA	98-06	H-1		4.CRDI(A-ENG) F/LIFT	ENGINE-DIESEL			√	√				
HYUNDAI	ASIA	98-06	H-1			ENGINE-FBM			√	√				
HYUNDAI	ASIA	98-06	H-1			AUTOMATIC TRANSAXLE		√	√	√	√	√		
HYUNDAI	ASIA	98-06	H-1											
HYUNDAI	ASIA	98-06	H-1		1. 2WD	ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√		1.AIR BLEEDING MODE
HYUNDAI	ASIA	98-06	H-1		2. 4WD	ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√		1.AIR BLEEDING MODE
HYUNDAI	ASIA	98-06	H-1			SRS-AIRBAG		√	√	√				1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	98-06	H-1		1. 2002MY~	TCCM			√	√				
HYUNDAI	ASIA	98-06	H-1		2. ~2001MY	TCCM			√	√				
HYUNDAI	ASIA	98-06	H-1		1. GASOLINE(2002MY~)	IMMOBILIZER			√	√				
HYUNDAI	ASIA	98-06	H-1		2. GASOLINE(~2001MY)	IMMOBILIZER			√	√				
HYUNDAI	ASIA	98-06	H-1		3.DIESEL(CRDI)	IMMOBILIZER						√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	98-06	H-1		4.DIESEL(COVEC-F)	IMMOBILIZER			√	√				
HYUNDAI	ASIA	98-06	H-1		5.DIESEL(DDS)	IMMOBILIZER			√	√				
HYUNDAI	ASIA	98-06	H-1			FUEL FIRED HEATER			√	√	√	√		
HYUNDAI	ASIA	98-06	H-1			CODE SAVING								√
HYUNDAI	ASIA	01-03	H-1 TRUCK			ENGINE-DIESEL		√	√	√	√	√		
HYUNDAI	ASIA	01-03	H-1 TRUCK			AUTOMATIC TRANSAXLE		√	√	√	√	√		
HYUNDAI	ASIA	01-03	H-1 TRUCK			ANTI-LOCK BRAKE SYSTEM			√	√	√	√		
HYUNDAI	ASIA	01-03	H-1 TRUCK			SRS-AIRBAG		√	√	√				1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	2006-	SANTAFE(MC)		1.UNLEAD GEN	ENGINE(GASOLINE)			√	√	√	√		1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2006-	SANTAFE(MC)		2.UNLEAD EOBD	ENGINE(GASOLINE)			√	√	√	√		1.PCM AUTO DETECTION RESET 2. PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2006-	SANTAFE(MC)		3.LEAD ALL	ENGINE(GASOLINE)			√	√	√	√		1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2006-	SANTAFE(MC)		4.UNLEAD OBD- II	ENGINE(GASOLINE)			√	√	√	√		1.PCM AUTO DETECTION RESET 2. PCM LOCK(MEC) SETTING
HYUNDAI	ASIA	2006-	SANTAFE(MC)		1.EURO-3 VGT(KWP)	ENGINE(DIESEL)		√	√	√	√	√		
HYUNDAI	ASIA	2006-	SANTAFE(MC)		2.EURO-4 VGT-CPF(CAN)	ENGINE(DIESEL)		√	√	√	√	√		
HYUNDAI	ASIA	2006-	SANTAFE(MC)		3.EURO-4 VGT+CPF(CAN)	ENGINE(DIESEL)		√	√	√	√	√		
HYUNDAI	ASIA	2006-	SANTAFE(MC)		1.GASOLINE	AUTOMATIC TRANSAXLE			√	√	√	√		1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2006-	SANTAFE(MC)		2.EURO-3 VGT(KWP)	AUTOMATIC TRANSAXLE		√	√	√	√	√		1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2006-	SANTAFE(MC)		3.EURO-4 VGT(CAN)	AUTOMATIC TRANSAXLE		√	√	√	√	√		1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2006-	SANTAFE(MC)			ABS/ESP		√	√	√	√	√		
HYUNDAI	ASIA	2006-	SANTAFE(MC)		1.GENERAL	SRS-AIRBAG		√	√	√				
HYUNDAI	ASIA	2006-	SANTAFE(MC)		2.NAS	SRS-AIRBAG		√	√	√				
HYUNDAI	ASIA	2006-	SANTAFE(MC)			FULL AUTO AIR/CON.		√	√	√	√	√		



HYUNDAI	ASIA	01-05	SANTAFE		1.WGT	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	01-05	SANTAFE		2.VGT	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	01-05	SANTAFE			AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	01-05	SANTAFE		1.2WD	ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	01-05	SANTAFE		2.4WD	ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	01-05	SANTAFE		1.GENERAL	SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	01-05	SANTAFE		2.NAS	SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.PASS.AIRBAG REALTIME INFO
HYUNDAI	ASIA	01-05	SANTAFE			TRACTION CONTROL SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	01-05	SANTAFE										
HYUNDAI	ASIA	01-05	SANTAFE			4WD CONTROL		√	√	√			
HYUNDAI	ASIA	01-05	SANTAFE			IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	01-05	SANTAFE			CODE SAVING							√
HYUNDAI	ASIA	01-06	TRAJET XG		1.LEAD ALL	ENG. 2.0L(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		2.UNLEAD GEN	ENG. 2.0L(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		3.UNLEAD EOBD	ENG. 2.0L(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		1.LEAD ALL	ENG. 2.7L(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		2.LEAD(F/LIFT~) ALL	ENG. 2.7L(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		3.UNLEAD(Ti O2S) GEN	ENG. 2.7L(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		4.UNLEAD(Zr O2S) GEN	ENG. 2.7L(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		5.UNLEAD(Ti O2S) EOBD	ENG. 2.7L(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		6.UNLEAD(Zr O2S) EOBD	ENG. 2.7L(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	01-06	TRAJET XG		1.WGT	ENGINE(DIESEL)		√	√	√	√	√	

HYUNDAI	ASIA	01-06	TRAJET XG		2.VGT	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	01-06	TRAJET XG		1. 2.0(MELCO)/2.7	AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	01-06	TRAJET XG		2. 2.0(SIEMENS)	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	01-06	TRAJET XG		3. DIESEL	AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	01-06	TRAJET XG			ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	01-06	TRAJET XG			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	01-06	TRAJET XG		1. 2.0(MELCO)/2.7	IMMOBILIZER			√	√			
HYUNDAI	ASIA	01-06	TRAJET XG		2. 2.0(SIEMENS)	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	01-06	TRAJET XG		3. DIESEL	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	01-06	TRAJET XG			FUEL FIRED HEATER			√	√	√	√	
HYUNDAI	ASIA	01-06	TRAJET XG			CODE SAVING							
HYUNDAI	ASIA	94-01	TAXI			ENGINE L4-SOHC FBM			√	√			
HYUNDAI	ASIA	94-01	TAXI			AUTOMATIC TRANSAXLE			√	√	√		
HYUNDAI	ASIA	01-06	TERRACAN		1. 2.5L DIESEL(TCL)	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	01-06	TERRACAN		2. 2.9L DIESEL(C/RAIL)	ENGINE		√	√	√	√	√	
HYUNDAI	ASIA	01-06	TERRACAN		3.UNLEAD 3.5L GEN	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA
HYUNDAI	ASIA	01-06	TERRACAN		4.UNLEAD 3.5L EOBD	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA
HYUNDAI	ASIA	01-06	TERRACAN		5.UNLEAD 3.5L OBD-II	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA
HYUNDAI	ASIA	01-06	TERRACAN		6.LEAD 3.5L ALL	ENGINE		√	√	√	√	√	1.FREEZE FRAME DATA
HYUNDAI	ASIA	01-06	TERRACAN			AUTOMATIC TRANSAXLE		√	√	√	√	√	
HYUNDAI	ASIA	01-06	TERRACAN			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	01-06	TERRACAN			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA	01-06	TERRACAN		1.EST	4WD CONTROL			√	√			
HYUNDAI	ASIA	01-06	TERRACAN		2.TOD	4WD CONTROL		√	√	√			
HYUNDAI	ASIA	01-06	TERRACAN		1. 2.5L DIESEL(TCI)	IMMOBILIZER			√	√			
HYUNDAI	ASIA	01-06	TERRACAN		2. 2.9L DIESEL(C/RAIL)	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	01-06	TERRACAN		3. 3.5L GASOLINE	IMMOBILIZER			√	√			
HYUNDAI	ASIA	01-06	TERRACAN			CODE SAVING							√
HYUNDAI	ASIA		GALLOPER-II		1.UNLEAD 3.0L GEN	ENGINE V6-SOHC			√	√	√		
HYUNDAI	ASIA		GALLOPER-II		2.UNLEAD 3.0L IMM/ME	ENGINE V6-SOHC			√	√	√		
HYUNDAI	ASIA		GALLOPER-II		3.LEAD 3.0L GEN	ENGINE V6-SOHC			√	√	√		
HYUNDAI	ASIA		GALLOPER-II		4.LEAD 3.0L IMM	ENGINE V6-SOHC		√	√	√	√	√	

HYUNDAI	ASIA		GALLOPER-II		5.DIESEL(COVEC-F)	ENGINE V6-SOHC		√	√	√	√	√	
HYUNDAI	ASIA		GALLOPER-II			AUTOMATIC TRANSAXLE			√	√			
HYUNDAI	ASIA		GALLOPER-II		1. ~2000MY	ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA		GALLOPER-II		2. 2001MY BOSCH	ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA		GALLOPER-II			SRS-AIRBAG		√	√	√			1.CRASHING INFORMATION 2.ACTIVE DTC INFORMATION 3.HISTORY DTC INFORMATION
HYUNDAI	ASIA		GALLOPER-II			IMMOBILIZER			√	√			
HYUNDAI	ASIA		SANTAMO		1.UNLEAD 2.0L ALL	ENGINE L4-SOHC			√	√	√		
HYUNDAI	ASIA		SANTAMO		2.LEAD 2.0L ALL	ENGINE L4-SOHC			√	√	√		
HYUNDAI	ASIA		SANTAMO		1.UNLEAD 2.0L ALL	ENGINE L4-DOHC			√	√	√		
HYUNDAI	ASIA		SANTAMO		2.LEAD 2.0L ALL	ENGINE L4-DOHC			√	√	√		
HYUNDAI	ASIA		SANTAMO			AUTOMATIC TRANSAXLE			√	√	√		
HYUNDAI	ASIA		SANTAMO			ANTI-LOCK BRAKE SYSTEM			√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA		SANTAMO			SRS-AIRBAG			√	√			1.CRASHING INFORMATION
HYUNDAI	ASIA		SANTAMO			IMMOBILIZER			√	√			
HYUNDAI	ASIA	2004-	TUCSON		1.UNLEAD 2.0L GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	2004-	TUCSON		2.UNLEAD 2.0L EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	2004-	TUCSON		3.UNLEAD 2.0L OBD-II	ENGINE(GASOLINE)		√	√	√	√	√	1.READINESS TEST 2.FREEZE FRAME DATA 3.EVAP.TEST(DMTL TEST) 4.RESETTING ADAPTIVE VALUES 5.VERSION CONFIGURATION
HYUNDAI	ASIA	2004-	TUCSON		4.LEAD 2.0L ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION
HYUNDAI	ASIA	2004-	TUCSON		5.UNLEAD 2.7L GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	2004-	TUCSON		6.UNLEAD 2.7L EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.VERSION CONFIGURATION
HYUNDAI	ASIA	2004-	TUCSON		7.UNLEAD 2.7L OBD-II	ENGINE(GASOLINE)		√	√	√	√	√	1.READINESS TEST 2.FREEZE FRAME DATA 3.EVAP.TEST(DMTL TEST) 4.RESETTING ADAPTIVE VALUES 5.VERSION CONFIGURATION
HYUNDAI	ASIA	2004-	TUCSON		8.LEAD 2.7L ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VERSION CONFIGURATION

HYUNDAI	ASIA	2004-	TUCSON		1.EURO-3 WGT	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2004-	TUCSON		2.EURO-4 VGT(CAN)	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2004-	TUCSON		3.EURO VGT(KWP)	ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2004-	TUCSON		1.2.0DIESEL/2.7L(MELCO TCM)	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2004-	TUCSON		2. 2.0L(SIEMENS PCM)	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2004-	TUCSON		3.2.0EURO-4	AUTOMATIC TRANSAXLE		√	√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2004-	TUCSON			ABS/TCS/ESP		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	2004-	TUCSON		1.GENERAL	SRS-AIRBAG		√	√	√			
HYUNDAI	ASIA	2004-	TUCSON		2.NAS	SRS-AIRBAG		√	√	√			1.PASS.AIRBAG REALTIME INFO 2.PODS RESET
HYUNDAI	ASIA	2004-	TUCSON			4WD CONTROL		√	√	√			
HYUNDAI	ASIA	2004-	TUCSON		1. 2.0L GASOLINE	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2004-	TUCSON		2. 2.7L GASOLINE	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2004-	TUCSON		3. DIESEL	IMMOBILIZER					√		1.PASSWORD TEACHING/CHANGINEG 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HYUNDAI	ASIA	2004-	TUCSON			FULL AUTO AIR/CON.		√	√	√	√	√	
HYUNDAI	ASIA	2004-	TUCSON		01.GENERAL	ETACS		√			√	√	
HYUNDAI	ASIA	2004-	TUCSON		02.NAS	ETACS		√			√	√	
HYUNDAI	ASIA	2004-	TUCSON		03.CHINA(JMC)	ETACS		√			√	√	
HYUNDAI	ASIA	2004-	TUCSON			CODE SAVING							√
HYUNDAI	ASIA	2007-	VERACRUZ		1.UNLEAD 3.8L GEN	ENGINE(GASOLINE)		√	√	√	√	√	1.RESTTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	VERACRUZ		2.UNLEAD 3.8L EOBD	ENGINE(GASOLINE)		√	√	√	√	√	1.RESTTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	VERACRUZ		3.UNLEAD 3.8L OBD- II	ENGINE(GASOLINE)		√	√	√	√	√	1.RESTTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	VERACRUZ		4.LEAD 3.8L ALL	ENGINE(GASOLINE)		√	√	√	√	√	1.RESTTING ADAPTIVE VALUES
HYUNDAI	ASIA	2007-	VERACRUZ			ENGINE(DIESEL)		√	√	√	√	√	
HYUNDAI	ASIA	2007-	VERACRUZ			AUTOMATIC TRANSAXLE			√	√	√	√	1.RESTTING AUTO T/A VALUES
HYUNDAI	ASIA	2007-	VERACRUZ			ABS/ESP		√	√	√	√	√	1.AIR BLEEDING MODE
HYUNDAI	ASIA	2007-	VERACRUZ			FULL AUTO AIR/CON.		√	√	√	√	√	
HYUNDAI	ASIA	2007-	VERACRUZ			SRS-AIRBAG		√	√	√			
HYUNDAI	ASIA	2007-	VERACRUZ			4WD CONTROL		√	√	√	√		
HYUNDAI	ASIA	2007-	VERACRUZ			POWER TAIL GATE		√	√	√			1.PASS.AIRBAG REALTIME INFO
HYUNDAI	ASIA	2007-	VERACRUZ		1.BODY CONTROL MODULE	BODY CONTROL MODULE		√	√	√	√	√	
HYUNDAI	ASIA	2007-	VERACRUZ		2.DRIVER DOOR MODULE(DDM)	BODY CONTROL MODULE		√		√	√	√	
HYUNDAI	ASIA	2007-	VERACRUZ		3.ASSIST DOOR MODULE(ADM)	BODY CONTROL MODULE		√		√	√	√	
HYUNDAI	ASIA	2007-	VERACRUZ		4.IMS	BODY CONTROL MODULE		√		√	√	√	
HYUNDAI	ASIA	2007-	VERACRUZ		5.TILTTELESCOPE(TILT)	BODY CONTROL MODULE		√		√	√	√	



