

Mark
X Description
Function is supported.

Special Function

Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuation	Special Functions
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	2009	INFINITI EX35	J50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	01/2008	INFINITI EX35	J50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	06/2008	INFINITI EX37	J50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ

Mark
X Description
Function is supported.

INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ

Mark
X Description
Function is supported.

INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ

Mark
X Description
Function is supported.

INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ

Mark
X Description
Function is supported.

INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	ALL	INFINITI M45	2005		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	ALL	INFINITI M45	2004		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	ALL	INFINITI M45	2003		ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ

Mark
X Description
Function is supported.

INFINITI	ALL	11/2005	INFINITI Q45	F50	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	08/2004	INFINITI Q45	F50	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	08/2003	INFINITI Q45	F50	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	09/2002	INFINITI Q45	F50	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	08/2001	INFINITI Q45	F50	ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	2003	ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	ALL	INFINITI QX4	2002	ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	ALL	INFINITI QX4	2001	ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	ALL	INFINITI QX4	1999	ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	ALL	INFINITI QX4	1998	ENGINE		X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	1997		ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	04/2008	INFINITI QX56	JA60		ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ
INFINITI	ALL	08/2007	INFINITI QX56	JA60		ENGINE			X	X	X	X	X	1.TP/SW SEN IDLE POSI ADJ 2.IGNITION TIMING ADJ 3.FUEL PRESSURE RELEASE 4.IDLE AIR VOL LEARN 5.TARGET IGN TIM ADJ 6.TARGET IDLE PRM ADJ

Basic Function

Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ENGINE		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ABS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	2009	INFINITI EX25/EX35	J50		AIRBAG		X	X	X		
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		BCM		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		METER/M&A		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ICC		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		HVAC		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		MULTI AV		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		EPS		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		e-4WD		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		DIU		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ALL MODE AWD/4WD		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	2009	INFINITI EX25/EX35	J50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ASCD			X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		HCM			X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		LDW			X	X	X	
INFINITI	ALL	2009	INFINITI EX25/EX35	J50		ACCELE PEDAL ACT		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		ENGINE		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		ABS		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		AIRBAG		X	X	X		
INFINITI	ALL	2009	INFINITI EX35	J50		BCM		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		METER/M&A		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		ICC		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		HVAC		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		MULTI AV		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	2009	INFINITI EX35	J50		EPS		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		e-4WD		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		DIU		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	2009	INFINITI EX35	J50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	2009	INFINITI EX35	J50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		ASCD			X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		HCM			X	X	X	
INFINITI	ALL	2009	INFINITI EX35	J50		LDW			X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	2009	INFINITI EX35	J50		ACCELE PEDAL ACT		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		ENGINE		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		ABS		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		AIRBAG		X	X	X		
INFINITI	ALL	01/2008	INFINITI EX35	J50		BCM		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		METER/M&A		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		ICC		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		HVAC		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		MULTI AV		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		EPS		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		e-4WD		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		DIU		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	01/2008	INFINITI EX35	J50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI EX35	J50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	01/2008	INFINITI EX35	J50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		ASCD			X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		HCM			X	X	X	
INFINITI	ALL	01/2008	INFINITI EX35	J50		LDW			X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		ENGINE		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		ABS		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		AIRBAG		X	X	X		
INFINITI	ALL	06/2008	INFINITI EX37	J50		BCM		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		METER/M&A		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		METER ACAMP		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	06/2008	INFINITI EX37	J50		ICC		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		HVAC		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		MULTI AV		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		EPS		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		e-4WD		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		DIU		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI EX37	J50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	06/2008	INFINITI EX37	J50		ACTIVE SUS		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	06/2008	INFINITI EX37	J50		ASCD			X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		HCM			X	X	X	
INFINITI	ALL	06/2008	INFINITI EX37	J50		LDW			X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		ENGINE		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		ABS		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		AIRBAG		X	X	X		
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		BCM		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		METER/M&A		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		ICC		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		HVAC		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		MULTI AV		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		EPS		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		e-4WD		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		DIU		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		ASCD			X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		HCM			X	X	X	
INFINITI	ALL	06/2007	INFINITI FX35/FX45	S50		LDW			X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		ENGINE		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		ABS		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		AIRBAG		X	X	X		
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		BCM		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		METER/M&A		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		ICC		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		HVAC		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		MULTI AV		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		EPS		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		e-4WD		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		DIU		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		ADAPTIVE LIGHT		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		ASCD			X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		HCM			X	X	X	
INFINITI	ALL	07/2006	INFINITI FX35/FX45	S50		LDW			X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		ENGINE		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		TRANSMISSION		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		ABS		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		AIRBAG		X	X	X		
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		BCM		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		METER/M&A		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		METER ACAMP		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		ICC		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		HVAC		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		MULTI AV		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		EPS		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		IPDM E/R		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		AIR PRESSURE MONITOR		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		e-4WD		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		DIU		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		SMART ENTRANCE		X	X	X		
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		ASCD			X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		HCM			X	X	X	
INFINITI	ALL	2009~	INFINITI FX35/FX50	S51		LDW			X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		ENGINE		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		TRANSMISSION		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		ABS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		AIRBAG		X	X	X		
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		BCM		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		METER/M&A		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		METER ACAMP		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		ICC		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		HVAC		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		MULTI AV		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		EPS		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		IPDM E/R		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		e-4WD		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		DIU		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		ALL MODE AWD/4WD		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		SMART ENTRANCE		X	X	X		
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		ASCD			X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		HCM			X	X	X	
INFINITI	ALL	05/2008	INFINITI FX35/FX50	S51		LDW			X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		ENGINE		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		TRANSMISSION		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		ABS		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		AIRBAG		X	X	X		
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		BCM		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		METER/M&A		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		METER ACAMP		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		ICC		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		HVAC		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		MULTI AV		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		EPS		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		IPDM E/R		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		e-4WD		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		DIU		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		SMART ENTRANCE		X	X	X		
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		ASCD			X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		HCM			X	X	X	
INFINITI	ALL	07/2006	INFINITI G35 Coupe	CV35		LDW			X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		ENGINE		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		TRANSMISSION		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		ABS		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		AIRBAG		X	X	X		
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		BCM		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		METER/M&A		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		METER ACAMP		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		ICC		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		HVAC		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		MULTI AV		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		EPS		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		IPDM E/R		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		e-4WD		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		DIU		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		AUTO SLIDE POS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		SMART ENTRANCE		X	X	X		
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		ASCD			X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		HCM			X	X	X	
INFINITI	ALL	08/2005	INFINITI G35 Coupe	CV35		LDW			X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		ENGINE		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		TRANSMISSION		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		ABS		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		AIRBAG		X	X	X		
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		BCM		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		METER/M&A		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		METER ACAMP		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		ICC		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		HVAC		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		MULTI AV		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		EPS		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		IPDM E/R		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		e-4WD		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		DIU		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		SMART ENTRANCE		X	X	X		
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		ASCD			X	X	X	
INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		HCM			X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	01/2005	INFINITI G35 Coupe	CV35		LDW			X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		ENGINE		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		TRANSMISSION		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		ABS		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		AIRBAG		X	X	X		
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		BCM		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		METER/M&A		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		METER ACAMP		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		ICC		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		HVAC		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		MULTI AV		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		EPS		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		IPDM E/R		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		e-4WD		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		DIU		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		SMART ENTRANCE		X	X	X		
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		ASCD			X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		HCM			X	X	X	
INFINITI	ALL	12/2007	INFINITI G35 Sedan	V36		LDW			X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		ENGINE		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		TRANSMISSION		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		ABS		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		AIRBAG		X	X	X		
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		BCM		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		METER/M&A		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		METER ACAMP		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		ICC		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		HVAC		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		MULTI AV		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		EPS		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		IPDM E/R		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		e-4WD		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		DIU		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		SMART ENTRANCE		X	X	X		
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		ACTIVE SUS		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		ASCD			X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		HCM			X	X	X	
INFINITI	ALL	12/2006	INFINITI G35 Sedan	V36		LDW			X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		ENGINE		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		TRANSMISSION		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		ABS		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		AIRBAG		X	X	X		
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		BCM		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		METER/M&A		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		METER ACAMP		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		ICC		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		HVAC		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		MULTI AV		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		EPS		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		IPDM E/R		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		e-4WD		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		DIU		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		SMART ENTRANCE		X	X	X		
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		ASCD			X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		HCM			X	X	X	
INFINITI	ALL	06/2008	INFINITI G37 Coupe	CV36		LDW			X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		ENGINE		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		TRANSMISSION		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		ABS		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		AIRBAG		X	X	X		
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		BCM		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		METER/M&A		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		METER ACAMP		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		ICC		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		HVAC		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		MULTI AV		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		EPS		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		IPDM E/R		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		e-4WD		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		DIU		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		ADAPTIVE LIGHT		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		SMART ENTRANCE		X	X	X		
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		ASCD			X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		HCM			X	X	X	
INFINITI	ALL	11/2007	INFINITI G37 Coupe	CV36		LDW			X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		ENGINE		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		TRANSMISSION		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		ABS		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		AIRBAG		X	X	X		
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		BCM		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		METER/M&A		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		METER ACAMP		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		ICC		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		HVAC		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		MULTI AV		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		EPS		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		IPDM E/R		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		AIR PRESSURE MONITOR		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		e-4WD		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		DIU		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		SMART ENTRANCE		X	X	X		
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		ASCD			X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		HCM			X	X	X	
INFINITI	ALL	07/2008	INFINITI G37 Sedan	V36		LDW			X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ENGINE		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ABS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	2010	INFINITI M25/M37	Y50		AIRBAG			X	X	X		
INFINITI	ALL	2010	INFINITI M25/M37	Y50		BCM			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		METER/M&A			X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		METER ACAMP			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ICC			X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		HVAC			X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		MULTI AV			X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		EPS			X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		IPDM E/R			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		AIR PRESSURE MONITOR			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		HEAD LAMP LEVELIZER			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		e-4WD			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		INTELLIGENT KEY			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		DIU			X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		AUTO DRIVE POS			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		AUTO SLIDE POS			X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		PRECRASH SEATBELT			X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ALL MODE AWD/4WD			X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	2010	INFINITI M25/M37	Y50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M25/M37	Y50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ASCD			X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		HCM			X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		LDW			X	X	X	
INFINITI	ALL	2010	INFINITI M25/M37	Y50		ACCELE PEDAL ACT		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ENGINE		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		TRANSMISSION		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ABS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		AIRBAG		X	X	X		
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		BCM		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		METER/M&A		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		METER ACAMP		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ICC		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		HVAC		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		MULTI AV		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		EPS		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		IPDM E/R		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		e-4WD		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		DIU		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		SMART ENTRANCE		X	X	X		
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ASCD			X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		HCM			X	X	X	
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		LDW			X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		ACCELE PEDAL ACT		X	X	X	X	X
INFINITI	ALL	2010	INFINITI M37/M56/M30d	Y51		LASER		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		ENGINE		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		ABS		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		AIRBAG		X	X	X		
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		BCM		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		METER/M&A		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		ICC		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		HVAC		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		MULTI AV		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		EPS		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		e-4WD		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		INTELLIGENT KEY		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		DIU		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		ASCD			X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		HCM			X	X	X	
INFINITI	ALL	08/2008	INFINITI M35/M45	Y50		LDW			X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		ENGINE		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		ABS		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		AIRBAG		X	X	X		
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		BCM		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		METER/M&A		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		ICC		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		HVAC		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		MULTI AV		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		EPS		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		e-4WD		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		DIU		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		SMART ENTRANCE		X	X	X		

Mark
X Description
Function is supported.

INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		ACTIVE SUS			X	X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		ASCD				X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		HCM				X	X	X	
INFINITI	ALL	01/2008	INFINITI M35/M45	Y50		LDW				X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		ENGINE			X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		TRANSMISSION			X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		ABS			X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		AIRBAG			X	X	X		
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		BCM			X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		METER/M&A			X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		METER ACAMP			X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		ICC			X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		HVAC			X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		MULTI AV			X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		EPS			X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		IPDM E/R			X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		AIR PRESSURE MONITOR			X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50		HEAD LAMP LEVELIZER			X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	e-4WD	X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	INTELLIGENT KEY	X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	DIU	X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	AUTO DRIVE POS	X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	AUTO SLIDE POS	X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	PRECRASH SEATBELT	X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	ALL MODE AWD/4WD	X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	4WAS(MAIN)/RAS/HICAS	X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	ADAPTIVE LIGHT	X	X	X	X	X
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	SMART ENTRANCE	X	X	X		
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	ACTIVE SUS	X	X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	ASCD		X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	HCM		X	X	X	
INFINITI	ALL	07/2006	INFINITI M35/M45	Y50	LDW		X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005	ENGINE	X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005	TRANSMISSION	X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005	ABS	X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005	AIRBAG	X	X	X		

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI M45	2005		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		ICC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		MULTI AV		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		IPDM E/R		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI M45	2005		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2005		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI M45	2005		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2005		LDW			X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		ENGINE		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		TRANSMISSION		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		ABS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		AIRBAG		X	X	X		
INFINITI	ALL	ALL	INFINITI M45	2004		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		ICC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		MULTI AV		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		IPDM E/R		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI M45	2004		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2004		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI M45	2004		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2004		LDW			X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		ENGINE		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		TRANSMISSION		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI M45	2003		ABS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		AIRBAG		X	X	X		
INFINITI	ALL	ALL	INFINITI M45	2003		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		ICC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		MULTI AV		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		IPDM E/R		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		PRECRASH SEATBELT		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI M45	2003		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI M45	2003		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI M45	2003		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI M45	2003		LDW			X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		ENGINE		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		ABS		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		AIRBAG		X	X	X		
INFINITI	ALL	11/2005	INFINITI Q45	F50		BCM		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		METER/M&A		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		ICC		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		HVAC		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		MULTI AV		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	11/2005	INFINITI Q45	F50		EPS		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		e-4WD		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		DIU		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	11/2005	INFINITI Q45	F50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	11/2005	INFINITI Q45	F50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		ASCD			X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		HCM			X	X	X	
INFINITI	ALL	11/2005	INFINITI Q45	F50		LDW			X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	08/2004	INFINITI Q45	F50		ENGINE		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		ABS		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		AIRBAG		X	X	X		
INFINITI	ALL	08/2004	INFINITI Q45	F50		BCM		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		METER/M&A		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		ICC		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		HVAC		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		MULTI AV		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		EPS		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		e-4WD		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		DIU		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		AUTO DRIVE POS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	08/2004	INFINITI Q45	F50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	08/2004	INFINITI Q45	F50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	08/2004	INFINITI Q45	F50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		ASCD			X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		HCM			X	X	X	
INFINITI	ALL	08/2004	INFINITI Q45	F50		LDW			X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		ENGINE		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		ABS		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		AIRBAG		X	X	X		
INFINITI	ALL	08/2003	INFINITI Q45	F50		BCM		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		METER/M&A		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		ICC		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	08/2003	INFINITI Q45	F50		HVAC		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		MULTI AV		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		EPS		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		e-4WD		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		DIU		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	08/2003	INFINITI Q45	F50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	08/2003	INFINITI Q45	F50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		ASCD			X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	08/2003	INFINITI Q45	F50		HCM			X	X	X	
INFINITI	ALL	08/2003	INFINITI Q45	F50		LDW			X	X	X	
INFINITI	ALL	09/2002	INFINITI Q45	F50		ENGINE			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		TRANSMISSION			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		ABS			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		AIRBAG			X	X	X	
INFINITI	ALL	09/2002	INFINITI Q45	F50		BCM			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		METER/M&A			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		METER ACAMP			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		ICC			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		HVAC			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		MULTI AV			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		EPS			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		IPDM E/R			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		AIR PRESSURE MONITOR			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		HEAD LAMP LEVELIZER			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		e-4WD			X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		INTELLIGENT KEY			X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	09/2002	INFINITI Q45	F50		DIU		X	X	X	X	
INFINITI	ALL	09/2002	INFINITI Q45	F50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	09/2002	INFINITI Q45	F50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	09/2002	INFINITI Q45	F50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	09/2002	INFINITI Q45	F50		SMART ENTRANCE		X	X	X		
INFINITI	ALL	09/2002	INFINITI Q45	F50		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	09/2002	INFINITI Q45	F50		ASCD			X	X	X	
INFINITI	ALL	09/2002	INFINITI Q45	F50		HCM			X	X	X	
INFINITI	ALL	09/2002	INFINITI Q45	F50		LDW			X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		ENGINE		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		TRANSMISSION		X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		ABS		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		AIRBAG		X	X	X		
INFINITI	ALL	08/2001	INFINITI Q45	F50		BCM		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		METER/M&A		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	08/2001	INFINITI Q45	F50		METER ACAMP		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		ICC		X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		HVAC		X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		MULTI AV		X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		EPS		X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		IPDM E/R		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		e-4WD		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		DIU		X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	08/2001	INFINITI Q45	F50		SMART ENTRANCE		X	X	X		

Mark
X Description
Function is supported.

INFINITI	ALL	08/2001	INFINITI Q45	F50		ACTIVE SUS			X	X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		ASCD				X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		HCM				X	X	X	
INFINITI	ALL	08/2001	INFINITI Q45	F50		LDW				X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		ENGINE			X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		TRANSMISSION			X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		ABS			X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		AIRBAG			X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	2003		BCM			X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		METER/M&A			X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		METER ACAMP			X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		ICC			X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		HVAC			X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		MULTI AV			X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		EPS			X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		IPDM E/R			X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		AIR PRESSURE MONITOR			X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		HEAD LAMP LEVELIZER			X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	2003		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2003		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	2003		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2003		LDW			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		ENGINE		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		TRANSMISSION		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		ABS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		AIRBAG		X	X	X		

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	2002		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		ICC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		MULTI AV		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		IPDM E/R		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	2002		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2002		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	2002		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2002		LDW			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		ENGINE		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		TRANSMISSION		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		ABS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		AIRBAG		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	2001		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		ICC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		MULTI AV		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		IPDM E/R		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	2001		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2001		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	2001		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2001		LDW			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		ENGINE		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		TRANSMISSION		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	2000		ABS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		AIRBAG		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	2000		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		ICC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		MULTI AV		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		IPDM E/R		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		PRECRASH SEATBELT		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	2000		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	2000		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	2000		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	2000		LDW			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		ENGINE		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		TRANSMISSION		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		ABS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		AIRBAG		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	1999		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		ICC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		MULTI AV		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	1999		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		IPDM E/R		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1999		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	1999		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1999		LDW			X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	1998		ENGINE		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		TRANSMISSION		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		ABS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		AIRBAG		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	1998		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		ICC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		MULTI AV		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		IPDM E/R		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		AUTO DRIVE POS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	1998		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1998		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	1998		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		ASCD			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1998		LDW			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		ENGINE		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		TRANSMISSION		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		ABS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		AIRBAG		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	1997		BCM		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		METER/M&A		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		METER ACAMP		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		ICC		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	1997		HVAC		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		MULTI AV		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		EPS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		IPDM E/R		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		e-4WD		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		DIU		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	ALL	INFINITI QX4	1997		SMART ENTRANCE		X	X	X		
INFINITI	ALL	ALL	INFINITI QX4	1997		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		ASCD			X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	ALL	INFINITI QX4	1997		HCM			X	X	X	
INFINITI	ALL	ALL	INFINITI QX4	1997		LDW			X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		ENGINE			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		TRANSMISSION			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		ABS			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		AIRBAG			X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		BCM			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		METER/M&A			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		METER ACAMP			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		ICC			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		HVAC			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		MULTI AV			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		EPS			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		IPDM E/R			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		AIR PRESSURE MONITOR			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		HEAD LAMP LEVELIZER			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		e-4WD			X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		INTELLIGENT KEY			X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	2010	INFINITI QX56	Z62		DIU		X	X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		SMART ENTRANCE		X	X	X		
INFINITI	ALL	2010	INFINITI QX56	Z62		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		ASCD			X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		HCM			X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		LDW			X	X	X	
INFINITI	ALL	2010	INFINITI QX56	Z62		ACCELE PEDAL ACT		X	X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		E-SUS		X	X	X	X	X
INFINITI	ALL	2010	INFINITI QX56	Z62		LASER		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60		ENGINE		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60		TRANSMISSION		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60		ABS		X	X	X	X	X

Mark
X Description
Function is supported.

INFINITI	ALL	04/2008	INFINITI QX56	JA60	AIRBAG		X	X	X		
INFINITI	ALL	04/2008	INFINITI QX56	JA60	BCM		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	METER/M&A		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60	METER ACAMP		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	ICC		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60	HVAC		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60	MULTI AV		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60	EPS		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60	IPDM E/R		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	e-4WD		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	DIU		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60	AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60	PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60	ALL MODE AWD/4WD		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	04/2008	INFINITI QX56	JA60		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	04/2008	INFINITI QX56	JA60		SMART ENTRANCE		X	X	X		
INFINITI	ALL	04/2008	INFINITI QX56	JA60		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60		ASCD			X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60		HCM			X	X	X	
INFINITI	ALL	04/2008	INFINITI QX56	JA60		LDW			X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		ENGINE		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		TRANSMISSION		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		ABS		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		AIRBAG		X	X	X		
INFINITI	ALL	08/2007	INFINITI QX56	JA60		BCM		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		METER/M&A		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		METER ACAMP		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		ICC		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		HVAC		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		MULTI AV		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		EPS		X	X	X	X	

Mark
X Description
Function is supported.

INFINITI	ALL	08/2007	INFINITI QX56	JA60		IPDM E/R		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		AIR PRESSURE MONITOR		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		HEAD LAMP LEVELIZER		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		e-4WD		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		INTELLIGENT KEY		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		DIU		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		AUTO DRIVE POS		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		AUTO SLIDE POS		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		PRECRASH SEATBELT		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		ALL MODE AWD/4WD		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		4WAS(MAIN)/RAS/HICAS		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		ADAPTIVE LIGHT		X	X	X	X	X
INFINITI	ALL	08/2007	INFINITI QX56	JA60		SMART ENTRANCE		X	X	X		
INFINITI	ALL	08/2007	INFINITI QX56	JA60		ACTIVE SUS		X	X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		ASCD			X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		HCM			X	X	X	
INFINITI	ALL	08/2007	INFINITI QX56	JA60		LDW			X	X	X	