

Mark X Description Function is supported.

Special Function

Automaker	Region	Year	Model	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
Mazda	ASIA	2009	MAZDA2(Europe)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2009	MAZDA2(Europe)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2009	MAZDA2(Europe)	EPS			X	X	X		Calibration After Parts Removal or Replacement
Mazda	ASIA	2009	MAZDA2(Europe)	EPS			X	X	X		Restoration Procedure for DTC_C1B00_95
Mazda	ASIA	2009	MAZDA2(Europe)	EPS			X	X	X		Restoration Procedure for DTC_C1B00_54
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	EPS			X	X	X		Calibration After Parts Removal or Replacement
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	EPS			X	X	X		Restoration Procedure for DTC_C1B00_95
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	EPS			X	X	X		Restoration PRocedure for DTC_C1B00_54
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	EPS			X	X	X		Calibration After Parts Removal or Replacement
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	EPS			X	X	X		Restoration Procedure for DTC_C1B00_95
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	EPS			X	X	X		Restoration Procedure for DTC_C1B00_54
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	ABS			X	X	X		brake fluid pressure sensor

Mark X Description Function is supported.

Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	EPS			X	X	X		Calibration After Parts Removal or Replacement
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	EPS			X	X	X		Restoration Procedure for DTC_C1B00_95
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	EPS			X	X	X		Restoration Procedure for DTC_C1B00_54
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)	ABS			X	X	X	X	brake fluid pressure sensor
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)	ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		DPF Assessment
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		DPF Regeneration

Mark X Description Function is supported.

Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		Reset PCM
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		Reset Injector
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X		Reset DPF
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	ABS			X	X	X		Longitudinal Acceleration Sensor Initialization
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ABS			X	X	X		Lateral Acceleration Sensor

Mark X Description Function is supported.

Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ABS			X	X	X		Yaw rate sensor
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ABS			X	X	X		Longitudinal Acceleration Sensor
Mazda	ASIA	2009	MAZDA3 (LF 2.0L, North America/General)	PCM			X	X	X		1.KOEO On Demand Self Test 2.KOER On Demand Self
Mazda	ASIA	2009	MAZDA3 (LF 2.0L, North America/General)	ABS			X	X	X		1.brake fluid pressure sensor 2.Lateral Acceleration Sensor
Mazda	ASIA	2009	MAZDA3 (R2_T 2.2L)	PCM			X	X	X		ETB/EGR initialization
Mazda	ASIA	2005	MAZDA5(L3 2.3L, Japan/General Specs)	GEM			X	X	X		Rain Sensor Reset
Mazda	ASIA	2008	MAZDA5(L3 2.3L, North America Specs)	ABS			X	X	X	X	brake fluid pressure sensor
Mazda	ASIA	2008	MAZDA5(L3 2.3L, North America Specs)	ABS			X	X	X	X	Lateral Acceleration Sensor
Mazda	ASIA	2008	MAZDA5(L3 2.3L, North America Specs)	GEM			X	X	X		Rain Sensor Reset
Mazda	ASIA	2009	MAZDA5(L3 2.3L, North America Specs)	ABS			X	X	X	X	brake fluid pressure sensor
Mazda	ASIA	2009	MAZDA5(L3 2.3L, North America Specs)	ABS			X	X	X	X	Lateral Acceleration Sensor
Mazda	ASIA	2009	MAZDA5(L3 2.3L, North America Specs)	GEM			X	X	X		Rain Sensor Reset
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	GEM			X	X	X		Rain Sensor Reset
Mazda	ASIA	2009	MAZDA6 (GH, before facelift)	PCM			X	X	X		DPF Assessment
Mazda	ASIA	2009	MAZDA6 (GH, before facelift)	PCM			X	X	X		DPF Regeneration

Mark X Description Function is supported.

Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X		Reset Injector
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X		Reset DPF
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Data Reset
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	ABS			X	X	X		Yaw rate sensor
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Data Reset
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	ABS			X	X	X		Yaw rate sensor
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2004	MAZDA6 (AJ 3.0L)	ABS			X	X	X		ABS service Bleed
Mazda	ASIA	2003	MAZDA6 (L3 2.3L)	ABS			X	X	X		ABS service Bleed
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		DPF Reset

Mark X Description Function is supported.

Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		DPF Assessment
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset PCM
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset Fuel pump
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset Injector
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset MAF sensor
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset O2/Air Fuel Ratio (A/F) Sensor
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset DPF
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X		Reset ETB/EGR
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	GEM			X	X	X		Rain Sensor Reset
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	GEM			X	X	X		Rain Sensor Reset
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	PCM			X	X	X		KOEO On Demand Self Test

Mark
X Description
Function is supported.

Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		DPF Assessment
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset PCM
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset Injector
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset DPF
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		KOEO On Demand Self Test

Mark X Description Function is supported.

Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		DPF Assessment
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset PCM
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset Injector
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X		Reset DPF
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	ABS			X	X	X		Longitudinal Acceleration Sensor Initialization
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		DPF Assessment
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		PCM
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		Engine Oil
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		Fuel Pump

Mark X Description Function is supported.

Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		Injector
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		MAF Sensor
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		O2 Sensor
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		DPF Pressure Sensor
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X		DPF
Mazda	ASIA	2010	MAZDA6 (Europe)	ABS			X	X	X		Sensor Initialization
Mazda	ASIA	2010	MAZDA6 (Europe)	EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	ABS			X	X	X		Steering Angle Sensor Initialization
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	PCM			X	X	X		KOEO On Demand Self Test

Mark
X Description
Function is supported.

Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	PCM			X	X	X		Reset PCM
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	PCM			X	X	X		Reset MAF sensor
Mazda	ASIA		CX-5 SH 2.2L	ABS - Anti-Lock Brake System			X	X	X	X	Brake Fluid Pressure Sensor Lateral Acceleration Sensor Yaw rate sensor Longitudinal Acceleration Sensor
Mazda	ASIA		CX-5 PE 2.0L	ABS - Anti-Lock Brake System			X	X	X	X	Brake Fluid Pressure Sensor Lateral Acceleration Sensor Yaw rate sensor Longitudinal Acceleration Sensor
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	PCM			X	X	X	X	KOEO On Demand Self Test
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	PCM			X	X	X	X	KOER On Demand Self Test
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	ABS			X	X	X	X	Yaw rate sensor Initialization
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	ABS			X	X	X	X	Lateral Acceleration Sensor Initialization

Mark X Description Function is supported.

Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	ABS			X	X	X	X	Steering angle sensor Initialization
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		DPF Assessment
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset PCM
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset Fuel Injector
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset DPF

Mark
X Description
Function is supported.

Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset SCR CU
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset SCR Converter
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X		Urea Hose Leak Test
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X		Urea Injector Test
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X		Urea Pump Test
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2011	CX-9(CA 3.7L, North America/General Specs)	PCM			X	X	X	X	KOEO On Demand Self Test

Mark X Description Function is supported.

Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	ABS			X	X	X	X	Sensor Initialization
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	ABS			X	X	X	X	ABS Service Bleed
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	VSM			X	X	X		Clear Freeze Frame Data
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	TCM			X	X	X	X	Neutral Position Learning
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2004	MX-5(LF 2.0L)	PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2004	MX-5(LF 2.0L)	PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2004	MX-5(LF 2.0L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2004	MX-5(LF 2.0L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2004	MX-5(LF 2.0L)	ABS			X	X	X		Steering angle sensor Initialization

Mark X Description Function is supported.

Basic Function

Automaker	Region	Year	Model	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations
Mazda	ASIA	2000-2008	MAZDA2	PCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA2	ABS/TCS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA2	ICM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA2	TCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA2	EPS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA2	RCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA2	GEM			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	RCM			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	ICM			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	BCM/GEM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2009	MAZDA2(Europe)	RKE			X	X	X	
Mazda	ASIA	2009	MAZDA2(Europe)	VSM			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	PCM			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	ABS			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	ABS			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	RCM			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	ICM			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	EPS			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	EPS			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	EPS			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	BCM/GEM			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	RKE			X	X	X	
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)	VSM			X	X	X	
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	ABS			X	X	X	
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	RCM			X	X	X	
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	ICM			X	X	X	
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	EPS			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	EPS			X	X	X	
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	EPS			X	X	X	
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)	GEM			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	PCM			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	PCM			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	ABS			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	ABS			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	RCM			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	ICM			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	EPS			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	EPS			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	EPS			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	BCM/GEM			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	RKE			X	X	X	
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)	VSM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA3	PCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA3	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA3	ICM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2008	MAZDA3	TCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA3	EPS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA3	RCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA3	GEM			X	X	X	
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)	PCM			X	X	X	
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)	ABS			X	X	X	
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)	EPS			X	X	X	
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)	RCM			X	X	X	
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)	TCM			X	X	X	
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)	BCM			X	X	X	
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)	ICM			X	X	X	
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L,North America)	PCM			X	X	X	X
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L,North America)	ABS			X	X	X	X
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L,North America)	ABS			X	X	X	
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L,North America)	RCM			X	X	X	
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L,North America)	ICM			X	X	X	
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L,North America)	EPS			X	X	X	
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L,North America)	GEM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)	TPM			X	X	X	
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	PCM			X	X	X	
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	PCM			X	X	X	
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	RCM			X	X	X	
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	ICM			X	X	X	
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	GEM			X	X	X	
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)	RKE			X	X	X	
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	PCM			X	X	X	
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	PCM			X	X	X	
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	RCM			X	X	X	
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	ICM			X	X	X	
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	GEM			X	X	X	
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)	TPM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	ABS			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	ABS			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	ABS			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	RCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	ICM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	EPS			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	BCM/GEM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	EATC			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	RKE			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	AFS			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	MID			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)	FFH			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	ABS			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	RCM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	ICM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	GEM			X	X	X	
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)	RKE			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ABS			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	RCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	ICM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	BCM/GEM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	EATC			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	RKE			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	RVM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	AFS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)	MID			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L3 2.3L, North America/General)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L3 2.3L, North America/General)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L3 2.3L, North America/General)	RCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L3 2.3L, North America/General)	ICM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L3 2.3L, North America/General)	GEM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L3 2.3L, North America/General)	TPM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L3 2.3L, North America/General)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L3 2.3L, North America/General)	EATC			X	X		
Mazda	ASIA	2009	MAZDA3 (LF 2.0L, North America/General)	PCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2009	MAZDA3 (LF 2.0L, North America/General)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (LF 2.0L, North America/General)	RCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (LF 2.0L, North America/General)	ICM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (LF 2.0L, North America/General)	GEM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (LF 2.0L, North America/General)	TPM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	RCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	ICM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	BCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	EATC			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	RKE			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	AFS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (L5 2.5L, AXELA)	MID			X	X	X	
Mazda	ASIA	2009	MAZDA3 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	ABS			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	SRS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	ICM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	BCM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	EATC			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	RKE			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	AFS			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	MID			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	RVM			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	BSML			X	X	X	
Mazda	ASIA	2009	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	BSMR			X	X	X	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	EATC			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	R_BCM			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	ABS			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	AFS_ALM			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	DSM			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	EPB			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	EPS			*	*	*	

Mark X Description Function is supported.

Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	FSC			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	F_BCM			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	IC			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	PCM			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	RCM			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	SBS			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	SCBS			*	*	*	
Mazda	ASIA	2014	MAZDA3 (AXELA/MAZDA3 PE 2.0L)	SSU			*	*	*	
Mazda	ASIA	2000-2008	MAZDA5	PCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA5	ABS/TCS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA5	ICM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA5	TCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA5	EPS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA5	RCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA5	GEM			X	X	X	
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)	PCM			X	X	X	
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)	ABS			X	X	X	
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)	RCM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)	ICM			X	X	X	
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)	EPS			X	X	X	
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)	GEM			X	X	X	
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)	EATC			X	X	X	
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)	RKE			X	X	X	
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	PCM			X	X	X	X
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	ABS			X	X	X	X
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	ABS			X	X	X	X
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	RCM			X	X	X	
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	ICM			X	X	X	
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	EPS			X	X	X	
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	GEM			X	X	X	
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	EATC			X	X	X	X
Mazda	ASIA	2008	MAZDA5(L3 2.3L,North America Specs)	TPM			X	X	X	X
Mazda	ASIA	2009	MAZDA5(L3 2.3L,North America Specs)	PCM			X	X	X	X
Mazda	ASIA	2009	MAZDA5(L3 2.3L,North America Specs)	ABS			X	X	X	X
Mazda	ASIA	2009	MAZDA5(L3 2.3L,North America Specs)	ABS			X	X	X	X
Mazda	ASIA	2009	MAZDA5(L3 2.3L,North America Specs)	RCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2009	MAZDA5(L3 2.3L, North America Specs)	ICM			X	X	X	
Mazda	ASIA	2009	MAZDA5(L3 2.3L, North America Specs)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA5(L3 2.3L, North America Specs)	GEM			X	X	X	
Mazda	ASIA	2009	MAZDA5(L3 2.3L, North America Specs)	EATC			X	X	X	X
Mazda	ASIA	2009	MAZDA5(L3 2.3L, North America Specs)	TPM			X	X	X	X
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	ABS			X	X	X	
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	ABS			X	X	X	
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	RCM			X	X	X	
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	ICM			X	X	X	
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	EPS			X	X	X	
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	GEM			X	X	X	
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	EATC			X	X	X	
Mazda	ASIA	2010	MAZDA5(L3 2.3L, North America Specs)	TPM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA6	PCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA6	ABS/TCS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA6	ICM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA6	TCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2000-2008	MAZDA6	EPS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA6	RCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA6	GEM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	ICM			X	X		
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	BCM/GEM			X	X		
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	RCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	EATC			X	X		

Mark
X Description
Function is supported.

Mazda	ASIA	2009	MAZDA6 (GH,before facelift)	RVM			X	X		
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	PCM			X	X	X	
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	ABS			X	X	X	
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	ABS			X	X	X	
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	RCM			X	X	X	
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	ICM			X	X	X	
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	LHID			X	X	X	
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)	RHID			X	X	X	
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	PCM			X	X	X	
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	ABS			X	X	X	
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	ABS			X	X	X	
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	RCM			X	X	X	
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	ICM			X	X	X	
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	LHID			X	X	X	
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)	RHID			X	X	X	
Mazda	ASIA	2004	MAZDA6 (AJ 3.0L)	PCM			X	X	X	
Mazda	ASIA	2004	MAZDA6 (AJ 3.0L)	ABS			X	X	X	
Mazda	ASIA	2004	MAZDA6 (AJ 3.0L)	RCM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	PCM			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	ABS			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	ABS			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	RCM			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	ICM			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	GEM			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	RKE			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	LHID			X	X	X	
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)	RHID			X	X	X	
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	PCM			X	X	X	
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	ABS			X	X	X	
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	ABS			X	X	X	
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	RCM			X	X	X	
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	ICM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	GEM			X	X	X	
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	RKE			X	X	X	
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	LHID			X	X	X	
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)	RHID			X	X	X	
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	PCM			X	X	X	
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	PCM			X	X	X	
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	RCM			X	X	X	
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	ICM			X	X	X	
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	GEM			X	X	X	
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)	RKE			X	X	X	
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	PCM			X	X	X	
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	PCM			X	X	X	
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	ABS			X	X	X	
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	RCM			X	X	X	
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	ICM			X	X	X	
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	EPS			X	X	X	
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)	GEM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	ABS			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	RCM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	ICM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	EPS			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	BCM/GEM			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	EATC			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	RKE			X	X	X	
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)	RVM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	ABS			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	RCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	ICM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	EPS			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	BCM/GEM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	EATC			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	RKE			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	RVM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	AFS			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	ICCM			X	X	X	
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)	MPM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	PCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	ABS			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2010	MAZDA6 (Europe)	RCM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	ICM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	EPS			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	BCM/GEM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	EATC			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	RKE			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	RVM			X	X	X	
Mazda	ASIA	2010	MAZDA6 (Europe)	AFS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA8	PCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA8	ABS/TCS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA8	ICM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA8	TCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA8	EPS			X	X	X	
Mazda	ASIA	2000-2008	MAZDA8	RCM			X	X	X	
Mazda	ASIA	2000-2008	MAZDA8	GEM			X	X	X	
Mazda	ASIA	2001	PREMACY(FS 2.0L)	PCM			X	X	X	
Mazda	ASIA	2001	PREMACY(FS 2.0L)	ABS			X	X	X	
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)	PCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)	ABS			X	X	X	
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)	RCM			X	X	X	
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)	ICM			X	X	X	
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)	EPS			X	X	X	
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)	GEM			X	X	X	
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)	EATC			X	X	X	
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)	RKE			X	X	X	
Mazda	ASIA	2000-2008	PREMACY	PCM			X	X	X	
Mazda	ASIA	2000-2008	PREMACY	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	PREMACY	ICM			X	X	X	
Mazda	ASIA	2000-2008	PREMACY	TCM			X	X	X	
Mazda	ASIA	2000-2008	PREMACY	EPS			X	X	X	
Mazda	ASIA	2000-2008	PREMACY	RCM			X	X	X	
Mazda	ASIA	2000-2008	PREMACY	GEM			X	X	X	
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE	PCM			X	X	X	
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE	ICM			X	X	X	
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE	TCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE	EPS			X	X	X	
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE	RCM			X	X	X	
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE	GEM			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	PCM			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	ABS			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	RCM			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	IC			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	GEM/SJB			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	ACM			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	FCIM			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	FDIM			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	HVAC			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	SDARS			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	4X4			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	OCSM			X	X	X	
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)	PAM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	PCM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	ABS			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	RCM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	ICM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	GEM/SJB			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	4X4			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	ACM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	APIM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	FCIM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	FDIM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	HVAC			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	OCSM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	PAM			X	X	X	
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)	SDARS			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	PCM			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	ABS			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	RCM			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	IC			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	GEM/SJB			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	ACM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	FCIM			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	HVAC			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	4X4			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	APIM			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	OCSM			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	PAM			X	X	X	
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)	GPSM			X	X	X	
Mazda	ASIA	2000-2008	RX-8	PCM			X	X	X	
Mazda	ASIA	2000-2008	RX-8	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	RX-8	ICM			X	X	X	
Mazda	ASIA	2000-2008	RX-8	TCM			X	X	X	
Mazda	ASIA	2000-2008	RX-8	EPS			X	X	X	
Mazda	ASIA	2000-2008	RX-8	RCM			X	X	X	
Mazda	ASIA	2000-2008	RX-8	GEM			X	X	X	
Mazda	ASIA	2000-2008	RX-8	RKE			X	X	X	
Mazda	ASIA	2000-2008	RX-8	TPM			X	X	X	
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	PCM			X	X	X	
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	PCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	ABS			X	X	X	
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	RCM			X	X	X	
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	ICM			X	X	X	
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	EPS			X	X	X	
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)	RKE			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	PCM			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	PCM			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	ABS			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	ABS			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	ABS			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	RCM			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	ICM			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	EPS			X	X	X	
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)	RKE			X	X	X	
Mazda	ASIA	2000-2008	VERSIA	PCM			X	X	X	
Mazda	ASIA	2000-2008	VERSIA	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	VERSIA	ICM			X	X	X	
Mazda	ASIA	2000-2008	VERSIA	TCM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2008	VERSIA	EPS			X	X	X	
Mazda	ASIA	2000-2008	VERSIA	RCM			X	X	X	
Mazda	ASIA	2000-2008	VERSIA	GEM			X	X	X	
Mazda	ASIA	2000-2008	MPV	PCM			X	X	X	
Mazda	ASIA	2000-2008	MPV	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	MPV	ICM			X	X	X	
Mazda	ASIA	2000-2008	MPV	TCM			X	X	X	
Mazda	ASIA	2000-2008	MPV	EPS			X	X	X	
Mazda	ASIA	2000-2008	MPV	RCM			X	X	X	
Mazda	ASIA	2000-2008	MPV	GEM			X	X	X	
Mazda	ASIA	2001	MPV(L3_T 2.3L)	PCM			X	X	X	X
Mazda	ASIA	2001	MPV(L3_T 2.3L)	ABS			X	X	X	X
Mazda	ASIA	2002	MPV(L3_T 2.3L)	PCM			X	X	X	X
Mazda	ASIA	2002	MPV(L3_T 2.3L)	ABS			X	X	X	X
Mazda	ASIA	2003	MPV(L3_T 2.3L)	PCM			X	X	X	X
Mazda	ASIA	2003	MPV(L3_T 2.3L)	ABS			X	X	X	X
Mazda	ASIA	2004	MPV(L3_T 2.3L)	PCM			X	X	X	X
Mazda	ASIA	2004	MPV(L3_T 2.3L)	ABS			X	X	X	X

Mark
X Description
Function is supported.

Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)	PCM			X	X	X	
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)	PCM			X	X	X	
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)	ABS			X	X	X	
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)	RCM			X	X	X	
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)	TCM			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	PCM			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	PCM			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	ABS			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	ABS			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	ABS			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	RCM			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	IC			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	GEM			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	RKE			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	ICCM			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	TCM			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	HCM			X	X	X	
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)	LTM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2008	ATENZA	PCM			X	X	X	
Mazda	ASIA	2000-2008	ATENZA	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	ATENZA	ICM			X	X	X	
Mazda	ASIA	2000-2008	ATENZA	TCM			X	X	X	
Mazda	ASIA	2000-2008	ATENZA	EPS			X	X	X	
Mazda	ASIA	2000-2008	ATENZA	RCM			X	X	X	
Mazda	ASIA	2000-2008	ATENZA	GEM			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	PCM			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	ABS			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	ABS			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	RCM			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	ICM			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	GEM			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	RKE			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	LHID			X	X	X	
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)	RHID			X	X	X	
Mazda	ASIA	2000-2008	AXELA	PCM			X	X	X	
Mazda	ASIA	2000-2008	AXELA	ABS\TCS			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2008	AXELA	ICM			X	X	X	
Mazda	ASIA	2000-2008	AXELA	TCM			X	X	X	
Mazda	ASIA	2000-2008	AXELA	EPS			X	X	X	
Mazda	ASIA	2000-2008	AXELA	RCM			X	X	X	
Mazda	ASIA	2000-2008	AXELA	GEM			X	X	X	
Mazda	ASIA	2000-2008	BONGO	PCM			X	X	X	
Mazda	ASIA	2000-2008	BONGO	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	BONGO	ICM			X	X	X	
Mazda	ASIA	2000-2008	BONGO	TCM			X	X	X	
Mazda	ASIA	2000-2008	BONGO	EPS			X	X	X	
Mazda	ASIA	2000-2008	BONGO	RCM			X	X	X	
Mazda	ASIA	2000-2008	BONGO	GEM			X	X	X	
Mazda	ASIA	2000-2008	BONGO BRAWNY	PCM			X	X	X	
Mazda	ASIA	2000-2008	BONGO BRAWNY	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	BONGO BRAWNY	ICM			X	X	X	
Mazda	ASIA	2000-2008	BONGO BRAWNY	TCM			X	X	X	
Mazda	ASIA	2000-2008	BONGO BRAWNY	EPS			X	X	X	
Mazda	ASIA	2000-2008	BONGO BRAWNY	RCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2000-2008	BONGO BRAWNY	GEM			X	X	X	
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	PCM			X	X	X	
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	PCM			X	X	X	
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	PCM			X	X	X	
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	PCM			X	X	X	
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	ABS			X	X	X	
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)	RCM			X	X	X	
Mazda	ASIA	2008	RANGER/BT-50(DURATEC-HE 2.3L)	PCM			X	X	X	
Mazda	ASIA	2008	RANGER/BT-50(DURATEC-HE 2.3L)	ABS			X	X	X	
Mazda	ASIA	2008	RANGER/BT-50(DURATEC-HE 2.3L)	RCM			X	X	X	
Mazda	ASIA	2008	RANGER/BT-50(DURATEC-HE 2.3L)	ICM			X	X	X	
Mazda	ASIA	2008	RANGER/BT-50(DURATEC-HE 2.3L)	GEM/SJB			X	X	X	
Mazda	ASIA	2008	RANGER/BT-50(DURATEC-HE 2.3L)	SDARS			X	X	X	
Mazda	ASIA	2008	RANGER/BT-50(DURATEC-HE 2.3L)	4X4			X	X	X	
Mazda	ASIA	2008	RANGER/BT-50(DURATEC-HE 2.3L)	OCSM			X	X	X	
Mazda	ASIA	2000-2008	RANGER/BT-50	PCM			X	X	X	
Mazda	ASIA	2000-2008	RANGER/BT-50	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	RANGER/BT-50	ICM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2008	RANGER/BT-50	TCM			X	X	X	
Mazda	ASIA	2000-2008	RANGER/BT-50	EPS			X	X	X	
Mazda	ASIA	2000-2008	RANGER/BT-50	RCM			X	X	X	
Mazda	ASIA	2000-2008	RANGER/BT-50	GEM			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	PCM - Powertrain Control Module			X	X		
Mazda	ASIA		CX-5 SH 2.2L	ABS - Anti-Lock Brake System			X	X	X	X
Mazda	ASIA		CX-5 SH 2.2L	RCM - Restraint Control Module			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	ICM - Instrument Cluster			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	EPS - Electronic-Controlled Power Steering			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	TCM - Transmission Control Module			X	X		
Mazda	ASIA		CX-5 SH 2.2L	EATC - Electronic Automatic Temperature Control			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	RVM - Rear Vehicle Monitoring			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	AFS - Adaptive Front Lighting System			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	ACU - Audio Control Unit			X	X		
Mazda	ASIA		CX-5 SH 2.2L	BSML - Blind Spot Monitoring (Left)			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	BSMR - Blind Spot Monitoring (Right)			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	4X4 - 4X4 Control Module			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	R_BCM - Rear Body Control Module			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA		CX-5 SH 2.2L	FSC - Forward Sensing Camera			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	F_BCM - Front Body Control Module			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	SCBS - Smart City Brake Support			X	X	X	
Mazda	ASIA		CX-5 SH 2.2L	SSU - Smart Start Unit			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	PCM - Powertrain Control Module			X	X		
Mazda	ASIA		CX-5 PE 2.0L	ABS - Anti-Lock Brake System			X	X	X	X
Mazda	ASIA		CX-5 PE 2.0L	RCM - Restraint Control Module			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	ICM - Instrument Cluster			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	EPS - Electronic-Controlled Power Steering			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	TCM - Transmission Control Module			X	X		
Mazda	ASIA		CX-5 PE 2.0L	EATC - Electronic Automatic Temperature Control			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	RVM - Rear Vehicle Monitoring			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	AFS - Adaptive Front Lighting System			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	ACU - Audio Control Unit			X	X		
Mazda	ASIA		CX-5 PE 2.0L	BSML - Blind Spot Monitoring (Left)			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	BSMR - Blind Spot Monitoring (Right)			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	4X4 - 4X4 Control Module			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	R_BCM - Rear Body Control Module			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA		CX-5 PE 2.0L	FSC - Forward Sensing Camera			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	F_BCM - Front Body Control Module			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	SCBS - Smart City Brake Support			X	X	X	
Mazda	ASIA		CX-5 PE 2.0L	SSU - Smart Start Unit			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	PCM - Powertrain Control Module			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	ABS - Anti-Lock Brake System			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	4X4 - 4X4 Control Module			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	ICM - Instrument Cluster			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	TCM - Transmission Control Module			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	RCM - Restraint Control Module			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	EATC - Electronic Automatic Temperature Control			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	AFS - Adaptive Front Lighting System			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	EPS - Electronic-Controlled Power Steering			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	EPB - Electric Parking Brake			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	DSM - Driver's Seat Module			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	R_BCM - Rear Body Control Module			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	FSC - Forward Sensing Camera			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	F_BCM - Front Body Control Module			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA		CX-5 PY 2.5L	SCBS - Smart City Brake Support			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	SSU - Smart Start Unit			X	X	X	
Mazda	ASIA		CX-5 PY 2.5L	SBS - Smart Brake Support/Radar Cruise Control			X	X	X	
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	PCM			X	X	X	X
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	PCM			X	X	X	X
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	ABS			X	X	X	X
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	ABS			X	X	X	X
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	ABS			X	X	X	X
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	RCM			X	X	X	
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	IC			X	X	X	
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	GEM			X	X	X	
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	EATC			X	X	X	X
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	RKE			X	X	X	X
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	ICCM			X	X	X	
Mazda	ASIA	2006	CX-7(L3_T 2.3L,Japan/General Specs)	TCM			X	X	X	X
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	PCM			X	X	X	
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	PCM			X	X	X	
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	ABS			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	RCM			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ICM			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	EPS			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	GEM			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	EATC			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	RKE			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	RVM			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	MID			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	FFH			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X	
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X	
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	PCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	RCM			X	X	X	
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ICM			X	X	X	
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	GEM			X	X	X	
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	EATC			X	X	X	
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	RKE			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	PCM			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	PCM			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	ABS			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	RCM			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	ICM			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	GEM			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	EATC			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	RKE			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2010	CX-7(L3_T 2.3L)	MID			X	X	X	
Mazda	ASIA	2010	CX-7(L3_T 2.3L)	TCM			X	X	X	
Mazda	ASIA	2000-2008	CX-7	PCM			X	X	X	
Mazda	ASIA	2000-2008	CX-7	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	CX-7	ICM			X	X	X	
Mazda	ASIA	2000-2008	CX-7	TCM			X	X	X	
Mazda	ASIA	2000-2008	CX-7	EPS			X	X	X	
Mazda	ASIA	2000-2008	CX-7	RCM			X	X	X	
Mazda	ASIA	2000-2008	CX-7	GEM			X	X	X	
Mazda	ASIA	2000-2008	CX-9	PCM			X	X	X	
Mazda	ASIA	2000-2008	CX-9	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	CX-9	ICM			X	X	X	
Mazda	ASIA	2000-2008	CX-9	TCM			X	X	X	
Mazda	ASIA	2000-2008	CX-9	EPS			X	X	X	
Mazda	ASIA	2000-2008	CX-9	RCM			X	X	X	
Mazda	ASIA	2000-2008	CX-9	GEM			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	PCM			X	X	X	X
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	PCM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	ABS			X	X	X	X
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	ABS			X	X	X	X
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	RCM			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	ICM			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	GEM			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	RKE			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	VSM			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	TCM			X	X	X	X
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	4X4			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	LTM			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	LCM			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	DSM			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	BSML			X	X	X	
Mazda	ASIA	2011	CX-9(CA 3.7L,North America/General Specs)	BSMR			X	X	X	
Mazda	ASIA	2000-2008	DEMIO	PCM			X	X	X	
Mazda	ASIA	2000-2008	DEMIO	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	DEMIO	ICM			X	X	X	
Mazda	ASIA	2000-2008	DEMIO	TCM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2008	DEMIO	EPS			X	X	X	
Mazda	ASIA	2000-2008	DEMIO	RCM			X	X	X	
Mazda	ASIA	2000-2008	DEMIO	GEM			X	X	X	
Mazda	ASIA	2000-2008	MX-5	PCM			X	X	X	
Mazda	ASIA	2000-2008	MX-5	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	MX-5	ICM			X	X	X	
Mazda	ASIA	2000-2008	MX-5	TCM			X	X	X	
Mazda	ASIA	2000-2008	MX-5	EPS			X	X	X	
Mazda	ASIA	2000-2008	MX-5	RCM			X	X	X	
Mazda	ASIA	2000-2008	MX-5	GEM			X	X	X	
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	PCM			X	X	X	
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	ABS			X	X	X	
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	ABS			X	X	X	
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	ABS			X	X	X	
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	RCM			X	X	X	
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	ICM			X	X	X	
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	RKE			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)	RHT			X	X	X	
Mazda	ASIA	2004	MX-5(LF 2.0L)	PCM			X	X	X	
Mazda	ASIA	2004	MX-5(LF 2.0L)	PCM			X	X	X	
Mazda	ASIA	2004	MX-5(LF 2.0L)	ABS			X	X	X	
Mazda	ASIA	2004	MX-5(LF 2.0L)	ABS			X	X	X	
Mazda	ASIA	2004	MX-5(LF 2.0L)	ABS			X	X	X	
Mazda	ASIA	2004	MX-5(LF 2.0L)	RCM			X	X	X	
Mazda	ASIA	2004	MX-5(LF 2.0L)	ICM			X	X	X	
Mazda	ASIA	2004	MX-5(LF 2.0L)	RHT			X	X	X	
Mazda	ASIA	2000-2008	ROADSTER	PCM			X	X	X	
Mazda	ASIA	2000-2008	ROADSTER	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	ROADSTER	ICM			X	X	X	
Mazda	ASIA	2000-2008	ROADSTER	TCM			X	X	X	
Mazda	ASIA	2000-2008	ROADSTER	EPS			X	X	X	
Mazda	ASIA	2000-2008	ROADSTER	RCM			X	X	X	
Mazda	ASIA	2000-2008	ROADSTER	GEM			X	X	X	
Mazda	ASIA	2000-2008	SPECTRON	PCM			X	X	X	
Mazda	ASIA	2000-2008	SPECTRON	ABS\TCS			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2008	SPECTRON	ICM			X	X	X	
Mazda	ASIA	2000-2008	SPECTRON	TCM			X	X	X	
Mazda	ASIA	2000-2008	SPECTRON	EPS			X	X	X	
Mazda	ASIA	2000-2008	SPECTRON	RCM			X	X	X	
Mazda	ASIA	2000-2008	SPECTRON	GEM			X	X	X	
Mazda	ASIA	2000-2008	TITAN DASH	PCM			X	X	X	
Mazda	ASIA	2000-2008	TITAN DASH	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	TITAN DASH	ICM			X	X	X	
Mazda	ASIA	2000-2008	TITAN DASH	TCM			X	X	X	
Mazda	ASIA	2000-2008	TITAN DASH	EPS			X	X	X	
Mazda	ASIA	2000-2008	TITAN DASH	RCM			X	X	X	
Mazda	ASIA	2000-2008	TITAN DASH	GEM			X	X	X	
Mazda	ASIA	2000-2008	PROTEGE	PCM			X	X	X	
Mazda	ASIA	2000-2008	PROTEGE	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	PROTEGE	ICM			X	X	X	
Mazda	ASIA	2000-2008	PROTEGE	TCM			X	X	X	
Mazda	ASIA	2000-2008	PROTEGE	EPS			X	X	X	
Mazda	ASIA	2000-2008	PROTEGE	RCM			X	X	X	

Mark
X Description
Function is supported.

Mazda	ASIA	2000-2008	PROTEGE	GEM			X	X	X	
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR	PCM			X	X	X	
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR	ICM			X	X	X	
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR	TCM			X	X	X	
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR	EPS			X	X	X	
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR	RCM			X	X	X	
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR	GEM			X	X	X	
Mazda	ASIA	2000-2008	LASER/323/TIERRA	PCM			X	X	X	
Mazda	ASIA	2000-2008	LASER/323/TIERRA	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	LASER/323/TIERRA	ICM			X	X	X	
Mazda	ASIA	2000-2008	LASER/323/TIERRA	TCM			X	X	X	
Mazda	ASIA	2000-2008	LASER/323/TIERRA	EPS			X	X	X	
Mazda	ASIA	2000-2008	LASER/323/TIERRA	RCM			X	X	X	
Mazda	ASIA	2000-2008	LASER/323/TIERRA	GEM			X	X	X	
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)	PCM			X	X	X	
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)	ICM			X	X	X	

Mark X Description Function is supported.

Mazda	ASIA	2000-2008	AZ/WAGON(MJ)	TCM			X	X	X	
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)	EPS			X	X	X	
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)	RCM			X	X	X	
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)	GEM			X	X	X	
Mazda	ASIA	2000-2008	FAMILIA/LASER	PCM			X	X	X	
Mazda	ASIA	2000-2008	FAMILIA/LASER	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	FAMILIA/LASER	ICM			X	X	X	
Mazda	ASIA	2000-2008	FAMILIA/LASER	TCM			X	X	X	
Mazda	ASIA	2000-2008	FAMILIA/LASER	EPS			X	X	X	
Mazda	ASIA	2000-2008	FAMILIA/LASER	RCM			X	X	X	
Mazda	ASIA	2000-2008	FAMILIA/LASER	GEM			X	X	X	
Mazda	ASIA	2000-2008	XEDOS9	PCM			X	X	X	
Mazda	ASIA	2000-2008	XEDOS9	ABS\TCS			X	X	X	
Mazda	ASIA	2000-2008	XEDOS9	ICM			X	X	X	
Mazda	ASIA	2000-2008	XEDOS9	TCM			X	X	X	
Mazda	ASIA	2000-2008	XEDOS9	EPS			X	X	X	
Mazda	ASIA	2000-2008	XEDOS9	RCM			X	X	X	
Mazda	ASIA	2000-2008	XEDOS9	GEM			X	X	X	

Mark
X Description
Function is supported.

Mazda	Asia	2000-2008	CAPELLA/CAPELA W/TELSTAR/TELSTAR W	PCM			X	X	X	
Mazda	Asia	2000-2008	CAPELLA/CAPELA W/TELSTAR/TELSTAR W	ABS\TCS			X	X	X	
Mazda	Asia	2000-2008	CAPELLA/CAPELA W/TELSTAR/TELSTAR W	ICM			X	X	X	
Mazda	Asia	2000-2008	CAPELLA/CAPELA W/TELSTAR/TELSTAR W	TCM			X	X	X	
Mazda	Asia	2000-2008	CAPELLA/CAPELA W/TELSTAR/TELSTAR W	EPS			X	X	X	
Mazda	Asia	2000-2008	CAPELLA/CAPELA W/TELSTAR/TELSTAR W	RCM			X	X	X	
Mazda	Asia	2000-2008	CAPELLA/CAPELA W/TELSTAR/TELSTAR W	GEM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/121	PCM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/121	ABS\TCS			X	X	X	
Mazda	Asia	2000-2008	DEMI0/121	ICM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/121	TCM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/121	EPS			X	X	X	
Mazda	Asia	2000-2008	DEMI0/121	RCM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/121	GEM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON	PCM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON	ABS\TCS			X	X	X	
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON	ICM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON	TCM			X	X	X	

Mark
X Description
Function is supported.

Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON	EPS			X	X	X	
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON	RCM			X	X	X	
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON	GEM			X	X	X	
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE	PCM			X	X	X	
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE	ABS\TCS			X	X	X	
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE	ICM			X	X	X	
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE	TCM			X	X	X	
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE	EPS			X	X	X	
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE	RCM			X	X	X	
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE	GEM			X	X	X	