

Mark X Description Function is supported.

Special Function

Experts function	SRS reset service		
	Read PIN	Read PIN(III IMMO from Engine)	
		Read PIN(II IMMO from Immobilizer box)	
		Read PIN(II IMMO from Instrument)	
Removing and installing brake pads			
Channel Information	01-Engine	04-Basic setting	Channel 001:Electronic throttle (throttle self-adaptation)
			Channel 002:Mass Air Flow Sensor(MAFS)detection
			Channel 003:Exhaust Gas Recirculation(EGR)
			Channel 008:Vacuum pump test(short distance)
			Channel 011:Stamping control
			Channel 028:ignition(Knock sensor test-short distance)
			Channel 034:Oxygen sensor control(aging test:cylinder bank 1, sensor 1)
			Channel 035:Oxygen sensor control(aging test:cylinder bank 2, sensor1)
			Channel 036:Oxygen sensor control(sensor ready-after catalyst converter)
			Channel 037:Oxygen sensor control(oxygen sensor variance, cylinder bank 1)
			Channel 038:Oxygen sensor control(oxygen sensor variance, cylinder bank 2)
Channel 039:Oxygen sensor control(sensor exchange)			

Mark
X Description
Function is supported.

			Channel 043:Oxygen sensor control(aging test: cylinder bank 1, sensor 2)
			Channel 044:Oxygen sensor control(aging test: cylinder bank 2,sensor 2)
			Channel 046:Oxygen sensor control(catalyst conversion testing, cylinder bank 1)
			Channel 047:Oxygen sensor control(catalyst conversion testing, cylinder bank 2)
			Channel 048:Oxygen sensor control(Catalyst converter thermal diagnosis, cylinder bank 1)
			Channel 060:Electronic throttle (throttle self-adaptation)
			Channel 063:Electronic throttle (forced downshift switch self-adaptation)
			Channel 070:Emission lowered (EVAP valve testing)
			Channel 071:Emission reduction (leakage diagnosis system)
			Channel 074:Exhaust gas recirculation (EGR) valve misalignment
			Channel 075:Emission reduction(Exhaust gas recirculation)
			Channel 077:Emission reduction(secondary air injection, cylinder bank 1)
			Channel 078:Emission reduction(secondary air injection, cylinder bank 2)
			Channel 094:Inlet camshaft adjustment
			Channel 096:Camshaft adjustment(exhaust)
			Channel 098:Electronic throttle (throttle self-adaptation)
			Channel 099:Oxygen sensor control cutoff

Mark Description
X Function is supported.

			Channel 103:Fuel injection (fuel pump self-adaptation)
			Channel 107:Fuel injection(fuel supply system)
			Channel 130:Engine cooling (electronic cooling system)
			Channel 140:Fuel supply system(fuel pressure lower)
			Channel 142:Fuel supply system(self-adaptation of intake channel flap, cylinder bank 1)
			Channel 145:test of exhaust gas temperature sensor
			Channel 146:NOX storage catalyst, cylinder bank 1
			Channel 148:Desulfuration NOX memory catalyst, cylinder bank 1
			Channel 152:NOX sensor offset
			Channel 190:Oxygen sensor control(aging test: cylinder bank 1,sensor 3)
			Channel 191:Leakage diagnosis ,secondary air injection
			Channel 200:Ready code(automatic "vehicle EOL" test)
			Channel 238:Fuel injection (fuel pump self-adaptation)
			Channel 243:Fuel pump misalignment
			10-Adaptation
	Channel 001:Idle speed adjustment		
	Channel 002:Torque limit		

Mark
X Description
Function is supported.

			Channel 003:Engine load calibration
			Channel 004:Calibration of servo pump load
			Channel 005:Exhaust gas recirculation(EGR)
			Channel 006:Idle speed
			Channel 007:Maximum speed limit
			Channel 008:Coolant temperature calibration
			Channel 009:Calibration of air-conditioner compressor torque
			Channel 012:Soot mass calibration
			Channel 050:Immobilizer (vehicle data self-adaptation)
			Channel 091:Immobilizer status
02-Auto Trans	04-Basic setting	Channel 000:Forced downshift self-adaptation	
03-ABS Brakes	04-Basic setting	Register/code-II information	
		Channel 001:Brake pump exhaust	
		Channel 001:Steering angle sensor (G85) misaligned	
		Channel 003:System function test activated	
		Channel 040:Longitudinal acceleration sensor off (G251)	
		Channel 042:Tire pressure monitoring system(TPMS)resetting	

Mark X Description Function is supported.

			Channel 060:Steering angle sensor adjustment (G85)	
			Channel 061:Speed,lateral/longitudinal accelerate sensor adjustment(G200/G202/G251)	
			Channel 063:Lateral accelerate sensor adjustment(G200)	
			Channel 066:Brake pressure sensor adjustment(G201)	
			Channel 068:Speed sensor adjustment(G202)	
			Channel 069:Longitudinal accelerate sensor adjustment(G251)	
			Channel 093:ESP(electronic stability program)driving test initialization	
	10-Adaptation		Safety access information	
			Channel 056:Trailer stability	
			Channel 058:Down-hill assist control(HHA)	
	08-Auto HVAC	04-Basic setting		Channel 000:Throttle motor position self-adaptation
				Channel 001:Throttle motor foundation setting
		10-Adaptation		Channel 001:Control motor of air flow air valve (V71)
				Channel 002:Control motor of recirculation gas air valve(V113)
				Channel 004:Current limitation of air-conditioner regulating valve (N280)
				Channel 006:Auxiliary heating/ventilation assistance
				Channel 007:Auxiliary heating/ventilation cutoff

Mark
X Description
Function is supported.

			Channel 009:Self-adaptation channel resetting (based on code)	
			Channel 011:Solar energy roof	
			Channel 015:Fresh air blower (V2) rotate speed during auxiliary heating/ventilation	
			Channel 021:Engine heating by auxiliary heating	
			Channel 022:Fresh air blower (V2) features	
			Channel 023:Temperature features	
			Channel 081:Self-adaptation values (vehicle data)	
	15-Airbags	04-Basic setting		Safety access information
				Channel 001:Foundation setting of seat occupation identification control module (J706)
		10-Adaptation		Safety access information
				Channel 000:Seat occupation identification resetting
				Channel 001:Front passager's airbag off
				Channel 002:Front driver's airbag off
				Channel 003:Airbag off at front passager's side
	Channel 004:Airbag off at front driver's side			
	Channel 005:Front passenger's seatbelt tensioner off			
	Channel 006:Front driver's seatbelt tensioner off			

Mark
X Description
Function is supported.

			Channel 007:Front passenger's head airbag off
			Channel 008:Front driver's head airbag off
			Channel 011:Rear driver's seatbelt tensioner off
			Channel 012:Rear driver's seatbelt tensioner off
			Channel 013:Passenger's seat occupation identification sensor off
			Channel 014:Battery separation off
			Channel 017:Front passenger's knee airbag off
			Channel 017:Anti-rollover column off
			Channel 018:Anti-rollover triggering counter resetting
			Channel 018:Front driver knee airbag off
			Channel 019:Rear central driver's safety belt tensioner off
			Channel 020:Front airbag off switch invalid
			Channel 021:Anti-rollover column off
			Channel 021:Battery separation relay (J655) off
			Channel 050:ESP(electronic stabilization program)-data (power transmission system)
			Channel 051:ESP(electronic stabilization program)-data(braking)
			Channel 081:Self-adaptation values (vehicle data)

Mark
X Description
Function is supported.

Mark	Description	Function is supported.	
X	16-Steering wheel	10-Adaptation	Channel 081:Self-adaptation values (vehicle data)
	17-Instruments	10-Adaptation	Channel 002:Maintenance reminding lamp
			Channel 003:Fuel consumption display
			Channel 004:Language
			Channel 005:Maintenance reminding-maximum distance for engine oil replacement
			Channel 006:Maintenance reminding-maximum distance
			Channel 007:Maintenance reminding-maximum time
			Channel 009:Distance (with 10km as unit)
			Channel 010:Maintenance remind-distance for engine oil replacement
			Channel 011:Maintenance remind-distance
			Channel 012:Maintenance remind-time
			Channel 016:Distance pulse identifier (only read)
			Channel 017:Self-adaptation cruise control (ACC)
			Channel 018:Extra heater
			Channel 019:Radio control clock
Channel 021:Immobilizer-key self-adaptation			
Channel 022:Production mode			

Mark
X Description
Function is supported.

			Channel 025:Safety belt warning
			Channel 027:Fuel tank features(fuel level sensor 4)
			Channel 028:Fuel tank features(fuel level sensor 3)
			Channel 029:Fuel tank features(fuel level sensor 2)
			Channel 030:Fuel tank features(fuel level sensor 1)
			Channel 031:Fuel tank features (humidity calibration)
			Channel 032:Fuel tank features (failure to detect the fuel tank volume)
			Channel 033:Fuel tank features (all calibration)
			Channel 034:Fuel tank features (drying calibration)
			Channel 035:Speed valve value
			Channel 038:Minimum test of engine oil
			Channel 039:Self-adaptation of engine oil level sensor
			Channel 040:Mileage after maintenance
			Channel 041:Time after maintenance
			Channel 042:Minimum mileage until the next maintenance
			Channel 043:Maximum mileage until the next maintenance
			Channel 044:Maximum time until the next maintenance

Mark
X Description
Function is supported.

			Channel 045:engine oil quality
			Channel 046:Total consumption (only limited to gas)
			Channel 047:Soot input (only limited to diesel vehicle)
			Channel 048:Heat load (only limited to diesel vehicle)
			Channel 049:Minimum time until the next maintenance
			Channel 050:Immobilizer-vehicle data self-adaptation
			Channel 050:With fixed maintenance interval as standard, fundamental distance value until the next engine oil replacement
			Channel 051:With fixed maintenance interval as standard, fundamental time value until the next engine oil replacement
			Channel 060:Power transmission system CAN-data bus
			Channel 061:Comfort mode CAN-data bus
			Channel 062:Entertainment system CAN- data bus
			Channel 099:Transport mode
			25-Immobilizer
Channel 021:Immobilizer (key self-adaptation)			
Channel 050:Immobilizer (vehicle data self-adaptation)			
34 level Control	10-Adaptation	Safety access information	
		Channel 001:Suspension calibration starting point, front left wheel data input	

Mark
X Description
Function is supported.

			Channel 002:Front right wheel data input
			Channel 003:Rear left wheel data input
			Channel 004:Rear right wheel data input
			Channel 005:Confirm the measurement values to be saved by inputting the new value 1
			Channel 010:You can turn off or turn on the altitude control system
	35-Centr.Locks	10-Adaptation	Channel 001:Remote control self-adaptation
			Channel 002:Unlocking twinkling
			Channel 003:Locking twinkling
			Channel 003:Automatic locking
			Channel 004:Automatic unlocking
			Channel 005:Internal monitoring
			Channel 006:Unlocking loudspeaker
			Channel 007:Locking loudspeaker
			Channel 008:Unlocking twinkling
			Channel 009:Locking twinkling
Channel 010:Country setting			
		Channel 021:Remote control self-adaptation (position of memory)	

Mark
X Description
Function is supported.

	44 Steering Assist	10-Adaptation	Channel 002:Malfunction indicator lamp(MIL)
			Channel 003:Driver's steering reminding (DSR)
			Channel 004:Parking steering assistance system
	46-Central Conv.	10-Adaptation	Channel 000:Remote control deleted
			Channel 001:Individualization-key 1
			Channel 001:Remote control self-adaptation
			Channel 002:Individualization-key 2
			Channel 002:Automatic locking setting
			Channel 003:Automatic unlocking setting
			Channel 003:Individualization-key 3
			Channel 003:Automatic locking
			Channel 004:Automatic unlocking
		Channel 004:Individualization-key 4	
		Channel 004:Enter the system unlocking reminding setting by keyless access	
		Channel 005:Internal monitoring	
			Channel 005:Remind setting by remote control button unlocking reminding
			Channel 006:Unlocking loudspeaker

Mark
X Description
Function is supported.

			Channel 006:Remind setting by door lock unlocking reminding
			Channel 007:Locking loudspeaker
			Channel 007:Enter the system unlocking reminding setting by keyless access
			Channel 008:Unlocking twinkling
			Channel 008:Confirm setting by remote control button locking
			Channel 009:Locking twinkling
			Channel 009:Confirm setting by door lock locking reminding
			Channel 010:Country setting
			Channel 010:Reminding with door at "safety" status (inapplicable to NAR)
			Channel 011:Alarm sound type (regulated based on noise)
			Channel 012:Safety configuration
			Channel 013:Alarm loudspeaker adjustment
			Channel 014:Tilt sensor(alarm threshold)
			Channel 015:Internal testing sensitivity
			Channel 016:Battery tested by alarm
			Channel 017:Comfort mode function (remote control)
			Channel 018:Alarm retarded

Mark
X Description
Function is supported.

			Channel 022:J605 controllor (automatic trunk lid) self-adaptation - off-position		
			Channel 023:J605 controllor (automatic trunk lid) self-adaptation - opened position		
			Channel 024:J605controllor (automatic trunk lid) self-adaptation-scope of activity		
			Channel 025:Activate window and roof control by remote control key		
			Channel 026:In accordance with the maintenance manual, if the disordered key is used for unlocking, the vehicle unlocking alarm will be activated 15 seconds in delay.		
			Channel 027:Complete unknown function-please turn on module 3 to get more information		
			Channel 050:Self-adaptation control lamp		
			Channel 060:Personal information		
			Channel 061:Comfort function		
			Channel 062:Central locking function		
			53-Parking Brake	04-Basic setting	Channel 005:Turn on the rear parking brake to replace the gasket
					Channel 006:Closed rear parking brake
					Channel 007:Turn on rear parking brake to facilitate repair
					Channel 010:Parking brake function test
		Channel 020:Longitudinal acceleration sensor adjustment (G251)			
	10-Adaptation	Channel 001:Transmitter type			
		Channel 003:Self-adaptation starting assistance system			

Mark X Description Function is supported.

			Channel 006:Gasket thickness (range: 3-14mm)
			Channel 020:Rear left brake self-adaptation
			Channel 021:Rear right brake self-adaptation
	65 Tire Pressure	10-Adaptation	Safety access information
			Channel 001:Tire pressure testing
			Channel 004:Tire-pressure self-adaptation
			Channel 005:Rated tire pressure under full load (front axle)
			Channel 006:Rated tire pressure under part load(front axle)
			Channel 007:Rated tire pressure under full load (rear axle)
			Channel 008:Rated tire pressure under part load(rear axle)
Channel 017:Antenna diagnosis			

Basic Function

Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations
SEAT	EUROPE				Without CAN	01-Engine		X	X	X	X	X
SEAT	EUROPE				Without CAN	02-Auto Trans		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				Without CAN	03-ABS Brake		X	X	X	X	X
SEAT	EUROPE				Without CAN	08-Auto HVAC		X	X	X	X	X
SEAT	EUROPE				Without CAN	09-Cent. Elect.		X	X	X	X	X
SEAT	EUROPE				Without CAN	15-Airbags		X	X	X	X	X
SEAT	EUROPE				Without CAN	16-Steering wheel		X	X	X	X	X
SEAT	EUROPE				Without CAN	17-Instruments		X	X	X	X	X
SEAT	EUROPE				Without CAN	18-Aux. Heat		X	X	X	X	X
SEAT	EUROPE				Without CAN	19-CAN Gateway		X	X	X	X	X
SEAT	EUROPE				Without CAN	22-AWD		X	X	X	X	X
SEAT	EUROPE				Without CAN	25-Immobilizer		X	X	X	X	X
SEAT	EUROPE				Without CAN	35-Centr. Locks		X	X	X	X	X
SEAT	EUROPE				Without CAN	37-Navigation		X	X	X	X	X
SEAT	EUROPE				Without CAN	45-Inter. Monitor		X	X	X	X	X
SEAT	EUROPE				Without CAN	46-Central Conv.		X	X	X	X	X
SEAT	EUROPE				Without CAN	55-Xenon Range		X	X	X	X	X
SEAT	EUROPE				Without CAN	56-Radio		X	X	X	X	X
SEAT	EUROPE				Without CAN	01-Engine		X	X	X	X	X
SEAT	EUROPE				Without CAN	41-Diesel Pump		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				Without CAN	02-Auto Trans		X	X	X	X	X
SEAT	EUROPE				Without CAN	32-Differential Locks		X	X	X	X	X
SEAT	EUROPE				Without CAN	11-Engine II		X	X	X	X	X
SEAT	EUROPE				Without CAN	51-Electric Drive		X	X	X	X	X
SEAT	EUROPE				Without CAN	12-Clutch		X	X	X	X	X
SEAT	EUROPE				Without CAN	21-Engine III		X	X	X	X	X
SEAT	EUROPE				Without CAN	61-Battery Charger		X	X	X	X	X
SEAT	EUROPE				Without CAN	22-AWD		X	X	X	X	X
SEAT	EUROPE				Without CAN	31-Engine other		X	X	X	X	X
SEAT	EUROPE				Without CAN	71-Battery Charger		X	X	X	X	X
SEAT	EUROPE				Without CAN	03-ABS Brake		X	X	X	X	X
SEAT	EUROPE				Without CAN	14-Susp. Elect.		X	X	X	X	X
SEAT	EUROPE				Without CAN	15-Airbags		X	X	X	X	X
SEAT	EUROPE				Without CAN	58-Aux Fuel Tank		X	X	X	X	X
SEAT	EUROPE				Without CAN	13-Auto Dist. Reg		X	X	X	X	X
SEAT	EUROPE				Without CAN	24-Anti Slip		X	X	X	X	X
SEAT	EUROPE				Without CAN	55-Xenon Range		X	X	X	X	X
SEAT	EUROPE				Without CAN	68-Wiper Electr.		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				Without CAN	23-Brake Booster		X	X	X	X	X
SEAT	EUROPE				Without CAN	34-Level Control		X	X	X	X	X
SEAT	EUROPE				Without CAN	65-Tyre Pressure		X	X	X	X	X
SEAT	EUROPE				Without CAN	1C-Level Sensing		X	X	X	X	X
SEAT	EUROPE				Without CAN	43-Brake assist		X	X	X	X	X
SEAT	EUROPE				Without CAN	44-Steering Assist		X	X	X	X	X
SEAT	EUROPE				Without CAN	53-Parking Brake		X	X	X	X	X
SEAT	EUROPE				Without CAN	54-Rear Spoiler		X	X	X	X	X
SEAT	EUROPE				Without CAN	64-Stabilizers		X	X	X	X	X
SEAT	EUROPE				Without CAN	35-Centr. Locks		X	X	X	X	X
SEAT	EUROPE				Without CAN	06-Seat Mem. Pass.		X	X	X	X	X
SEAT	EUROPE				Without CAN	08-Auto HVAC		X	X	X	X	X
SEAT	EUROPE				Without CAN	42-Door Elect. Driver		X	X	X	X	X
SEAT	EUROPE				Without CAN	45-Inter. Monitor		X	X	X	X	X
SEAT	EUROPE				Without CAN	16-Steering wheel		X	X	X	X	X
SEAT	EUROPE				Without CAN	18-Aux. Heat		X	X	X	X	X
SEAT	EUROPE				Without CAN	52-Door Elect. Pass.		X	X	X	X	X
SEAT	EUROPE				Without CAN	63-Entry Assist. D		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				Without CAN	26-Auto Roof		X	X	X	X	X
SEAT	EUROPE				Without CAN	28-Hvac,Rear		X	X	X	X	X
SEAT	EUROPE				Without CAN	62-Door,Rear Right		X	X	X	X	X
SEAT	EUROPE				Without CAN	73-Entry Assist,P		X	X	X	X	X
SEAT	EUROPE				Without CAN	36-Seat Mem.Driver		X	X	X	X	X
SEAT	EUROPE				Without CAN	38-Roof Electronics		X	X	X	X	X
SEAT	EUROPE				Without CAN	72-Door, Rear Right		X	X	X	X	X
SEAT	EUROPE				Without CAN	7D-Aux. Heat		X	X	X	X	X
SEAT	EUROPE				Without CAN	46-Central Conv.		X	X	X	X	X
SEAT	EUROPE				Without CAN	48-Seat, Rear, DS		X	X	X	X	X
SEAT	EUROPE				Without CAN	78-Slide Door, Right		X	X	X	X	X
SEAT	EUROPE				Without CAN	66-Sear, Rear, PS		X	X	X	X	X
SEAT	EUROPE				Without CAN	0D-Slide Door, Left		X	X	X	X	X
SEAT	EUROPE				Without CAN	05-Acc/Start Auth		X	X	X	X	X
SEAT	EUROPE				Without CAN	17-Instruments		X	X	X	X	X
SEAT	EUROPE				Without CAN	57-TV Tuner		X	X	X	X	X
SEAT	EUROPE				Without CAN	29-Left Light		X	X	X	X	X
SEAT	EUROPE				Without CAN	25-Immobilizer		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				Without CAN	27-Ctrl Head. Rear		X	X	X	X	X
SEAT	EUROPE				Without CAN	67-Voice Control		X	X	X	X	X
SEAT	EUROPE				Without CAN	39-Right Light		X	X	X	X	X
SEAT	EUROPE				Without CAN	75-Telematics		X	X	X	X	X
SEAT	EUROPE				Without CAN	37-Navigation		X	X	X	X	X
SEAT	EUROPE				Without CAN	77-Telephone		X	X	X	X	X
SEAT	EUROPE				Without CAN	49-Automatic Light		X	X	X	X	X
SEAT	EUROPE				Without CAN	56-Radio		X	X	X	X	X
SEAT	EUROPE				Without CAN	47-Sound System		X	X	X	X	X
SEAT	EUROPE				Without CAN	09-Cent. Elect.		X	X	X	X	X
SEAT	EUROPE				Without CAN	59-Tow portection		X	X	X	X	X
SEAT	EUROPE				Without CAN	76-Park Assist		X	X	X	X	X
SEAT	EUROPE				Without CAN	19-CAN Gateway		X	X	X	X	X
SEAT	EUROPE				Without CAN	69-Trailer		X	X	X	X	X
SEAT	EUROPE				Without CAN	07-Control Head		X	X	X	X	X
SEAT	EUROPE				Without CAN	1D-Driver Iden.		X	X	X	X	X
SEAT	EUROPE				Without CAN	0E-Media Player 1		X	X	X	X	X
SEAT	EUROPE				Without CAN	4E-Ctrl Head RR		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				Without CAN	0F-Digital Radio		X	X	X	X	X
SEAT	EUROPE				Without CAN	2D-Intercom		X	X	X	X	X
SEAT	EUROPE				Without CAN	1E-Media Player 2		X	X	X	X	X
SEAT	EUROPE				Without CAN	5E-Ctrl Head Roof		X	X	X	X	X
SEAT	EUROPE				Without CAN	2F-Digital TV		X	X	X	X	X
SEAT	EUROPE				Without CAN	3D-Special Function		X	X	X	X	X
SEAT	EUROPE				Without CAN	2E-Media Player 3		X	X	X	X	X
SEAT	EUROPE				Without CAN	6E-Ctrl Head Roof		X	X	X	X	X
SEAT	EUROPE				Without CAN	2F-Digital TV		X	X	X	X	X
SEAT	EUROPE				Without CAN	4D-Data Transfer		X	X	X	X	X
SEAT	EUROPE				Without CAN	3E-Media Player 4		X	X	X	X	X
SEAT	EUROPE				Without CAN	7E-Ctrl Head Dash		X	X	X	X	X
SEAT	EUROPE				Without CAN	4f-Centr. Electr. II		X	X	X	X	X
SEAT	EUROPE				With CAN	01-Engine		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM20TFS8K2 907115Q)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070A)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070BC)		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070D)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070G_AU35)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070G_VW36)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070M)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070T_AU35)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM12TFS021 03F906070T_VW36)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM14TSI03C 906027AD)		X	X	X	X	X
SEAT	EUROPE				With CAN	01- Engine(EV_ECM14TSI03C 906027AE)		X	X	X	X	X
SEAT	EUROPE				With CAN	41-Diesel Pump		X	X	X	X	X
SEAT	EUROPE				With CAN	02-Auto Trans		X	X	X	X	X
SEAT	EUROPE				With CAN	02-Auto Trans(EV_TCMVL381)		X	X	X	X	X
SEAT	EUROPE				With CAN	32-Differential Locks		X	X	X	X	X
SEAT	EUROPE				With CAN	11-Engine II		X	X	X	X	X
SEAT	EUROPE				With CAN	51-Electric Drive		X	X	X	X	X
SEAT	EUROPE				With CAN	12-Clutch		X	X	X	X	X
SEAT	EUROPE				With CAN	21-Engine III		X	X	X	X	X
SEAT	EUROPE				With CAN	61-Battery Charger		X	X	X	X	X
SEAT	EUROPE				With CAN	22-AWD		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				With CAN	31-Engine other		X	X	X	X	X
SEAT	EUROPE				With CAN	71-Battery Charger		X	X	X	X	X
SEAT	EUROPE				With CAN	03-ABS Brake		X	X	X	X	X
SEAT	EUROPE				With CAN	03-ABS Brake(2009,2010Type)		X	X	X	X	X
SEAT	EUROPE				With CAN	14-Susp. Elect.		X	X	X	X	X
SEAT	EUROPE				With CAN	74-Chassis Control		X	X	X	X	X
SEAT	EUROPE				With CAN	42-Door Elect. Driver		X	X	X	X	X
SEAT	EUROPE				With CAN	13-Auto Dist. Reg		X	X	X	X	X
SEAT	EUROPE				With CAN	24-Anti Slip		X	X	X	X	X
SEAT	EUROPE				With CAN	15-Airbags		X	X	X	X	X
SEAT	EUROPE				With CAN	15-Airbags(EV_AirbaVW10BP AVW250)		X	X	X	X	X
SEAT	EUROPE				With CAN	15-Airbags(EV_AirbaVW10SM EVW360)		X	X	X	X	X
SEAT	EUROPE				With CAN	15-Airbags(EV_AirbaAU10SM EAU485)		X	X	X	X	X
SEAT	EUROPE				With CAN	15-Airbags(EV_AirbaAU10SM EAU416)		X	X	X	X	X
SEAT	EUROPE				With CAN	15-Airbags(EV_AirbaECUVWA UDI010)		X	X	X	X	X
SEAT	EUROPE				With CAN	52-Door Elect. Pass.		X	X	X	X	X
SEAT	EUROPE				With CAN	23-Brake Booster		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				With CAN	34-Level Control		X	X	X	X	X
SEAT	EUROPE				With CAN	55-Xenon Range		X	X	X	X	X
SEAT	EUROPE				With CAN	62-Door,Rear Right		X	X	X	X	X
SEAT	EUROPE				With CAN	43-Brake assist		X	X	X	X	X
SEAT	EUROPE				With CAN	44-Steering Assist		X	X	X	X	X
SEAT	EUROPE				With CAN	65-Tyre Pressure		X	X	X	X	X
SEAT	EUROPE				With CAN	72-Door, Rear Right		X	X	X	X	X
SEAT	EUROPE				With CAN	53-Parking Brake		X	X	X	X	X
SEAT	EUROPE				With CAN	54-Rear Spoiler		X	X	X	X	X
SEAT	EUROPE				With CAN	58-Aux Fuel Tank		X	X	X	X	X
SEAT	EUROPE				With CAN	78-Slide Door, Right		X	X	X	X	X
SEAT	EUROPE				With CAN	04-Steering		X	X	X	X	X
SEAT	EUROPE				With CAN	64-Stabilizers		X	X	X	X	X
SEAT	EUROPE				With CAN	68-Wiper Electr.		X	X	X	X	X
SEAT	EUROPE				With CAN	0D-Slide Door, Left		X	X	X	X	X
SEAT	EUROPE				With CAN	35-Centr. Locks		X	X	X	X	X
SEAT	EUROPE				With CAN	35-Centr. Locks(2009,2010Type)		X	X	X	X	X
SEAT	EUROPE				With CAN	06-Seat Mem. Pass.		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				With CAN	08-Auto HVAC		X	X	X	X	X
SEAT	EUROPE				With CAN	08-Auto HVAC(2009,2010Type)		X	X	X	X	X
SEAT	EUROPE				With CAN	08-Auto HVAC(EV_ClimaAutoBasis_SE35)		X	X	X	X	
SEAT	EUROPE				With CAN	08-Auto HVAC(EV_ClimaAutoBasis_SK35)		X	X	X	X	
SEAT	EUROPE				With CAN	08-Auto HVAC(EV_ClimaAutoBasis_SK46)		X	X	X	X	
SEAT	EUROPE				With CAN	08-Auto HVAC(EV_ClimaAutoBasis_VW36)		X	X	X	X	
SEAT	EUROPE				With CAN	08-Auto HVAC(EV_ClimaAutoBasis_VW46)		X	X	X	X	
SEAT	EUROPE				With CAN	08-Auto HVAC(EV_ClimaAutoShara Basis)		X	X	X	X	
SEAT	EUROPE				With CAN	08-Auto HVAC(EV_ClimaBasis_SK3 5)		X	X	X	X	
SEAT	EUROPE				With CAN	08-Auto HVAC(EV_ClimaBasis_SK4 6)		X	X	X	X	
SEAT	EUROPE				With CAN	1C-Level Sensing		X	X	X	X	X
SEAT	EUROPE				With CAN	45-Inter. Monitor		X	X	X	X	X
SEAT	EUROPE				With CAN	16-Steering wheel		X	X	X	X	X
SEAT	EUROPE				With CAN	16-Steering wheel(2009,2010Type)		X	X	X	X	X
SEAT	EUROPE				With CAN	18-Aux. Heat		X	X	X	X	X
SEAT	EUROPE				With CAN	3C-Lane Change		X	X	X	X	X
SEAT	EUROPE				With CAN	63-Entry Assist. D		X	X	X	X	X
SEAT	EUROPE				With CAN	26-Auto Roof		X	X	X	X	X

Mark X Description Function is supported.

SEAT	EUROPE				With CAN	28-Hvac,Rear		X	X	X	X	X
SEAT	EUROPE				With CAN	4C-Tyre Pressure II		X	X	X	X	X
SEAT	EUROPE				With CAN	73-Entry Assist,P		X	X	X	X	X
SEAT	EUROPE				With CAN	36-Seat Mem.Driver		X	X	X	X	X
SEAT	EUROPE				With CAN	38-Roof Electronics		X	X	X	X	X
SEAT	EUROPE				With CAN	5C-Lane retain		X	X	X	X	X
SEAT	EUROPE				With CAN	7D-Aux. Heat		X	X	X	X	X
SEAT	EUROPE				With CAN	46-Central Conv.		X	X	X	X	X
SEAT	EUROPE				With CAN	48-Seat, Rear, DS		X	X	X	X	X
SEAT	EUROPE				With CAN	6C-Back Up		X	X	X	X	X
SEAT	EUROPE				With CAN	0B-Sec. Air		X	X	X	X	X
SEAT	EUROPE				With CAN	66-Sear, Rear, PS		X	X	X	X	X
SEAT	EUROPE				With CAN	05-Acc/Start Auth		X	X	X	X	X
SEAT	EUROPE				With CAN	07-Control Head		X	X	X	X	X
SEAT	EUROPE				With CAN	57-TV Tuner		X	X	X	X	X
SEAT	EUROPE				With CAN	29-Left Light		X	X	X	X	X
SEAT	EUROPE				With CAN	25-Immobilizer		X	X	X	X	X
SEAT	EUROPE				With CAN	25-		X	X	X	X	X

Mark
X Description
Function is supported.

Mark	Description	Function is supported.										
						Immobilizer(2009,2010Type						
SEAT	EUROPE				With CAN	17-Instruments		X	X	X	X	X
SEAT	EUROPE				With CAN	17-Instruments(2009,2010Type		X	X	X	X	X
SEAT	EUROPE				With CAN	17-Instruments(EV_Kombi_UD S_VDD_RM09)		X	X	X	X	X
SEAT	EUROPE				With CAN	17-Instruments(EV_Kombi_UD S_VDD_RM09_SE25)		X	X	X	X	X
SEAT	EUROPE				With CAN	17-Instruments(EV_Kombi_UD S_VDD_RM09_SK35)		X	X	X	X	X
SEAT	EUROPE				With CAN	17-Instruments(EV_Kombi_UD S_VDD_RM09_VW25)		X	X	X	X	X
SEAT	EUROPE				With CAN	17-Instruments(EV_Kombi_UD S_VDD_PQ35_SE25)		X	X	X	X	X
SEAT	EUROPE				With CAN	67-Voice Control		X	X	X	X	X
SEAT	EUROPE				With CAN	39-Right Light		X	X	X	X	X
SEAT	EUROPE				With CAN	75-Telematics		X	X	X	X	X
SEAT	EUROPE				With CAN	27-Ctrl Head. Rear		X	X	X	X	X
SEAT	EUROPE				With CAN	77-Telephone		X	X	X	X	X
SEAT	EUROPE				With CAN	49-Automatic Light		X	X	X	X	X
SEAT	EUROPE				With CAN	56-Radio		X	X	X	X	X
SEAT	EUROPE				With CAN	37-Navigation		X	X	X	X	X
SEAT	EUROPE				With CAN	09-Cent. Elect.		X	X	X	X	X
SEAT	EUROPE				With CAN	59-Tow portection		X	X	X	X	X

Mark
X Description
Function is supported.

SEAT	EUROPE				With CAN	76-Park Assist		X	X	X	X	X
SEAT	EUROPE				With CAN	47-Sound System		X	X	X	X	X
SEAT	EUROPE				With CAN	19-CAN Gateway		X	X	X	X	X
SEAT	EUROPE				With CAN	69-Trailer		X	X	X	X	X
SEAT	EUROPE				With CAN	1D-Driver Iden.		X	X	X	X	X
SEAT	EUROPE				With CAN	0E-Media Player 1		X	X	X	X	X
SEAT	EUROPE				With CAN	4E-Ctrl Head RR		X	X	X	X	X
SEAT	EUROPE				With CAN	0F-Digital Radio		X	X	X	X	X
SEAT	EUROPE				With CAN	2D-Intercom		X	X	X	X	X
SEAT	EUROPE				With CAN	1E-Media Player 2		X	X	X	X	X
SEAT	EUROPE				With CAN	5E-Ctrl Head Roof		X	X	X	X	X
SEAT	EUROPE				With CAN	1F-Sat. Tuner		X	X	X	X	X
SEAT	EUROPE				With CAN	3D-Special Function		X	X	X	X	X
SEAT	EUROPE				With CAN	2E-Media Player 3		X	X	X	X	X
SEAT	EUROPE				With CAN	6E-Ctrl Head Roof		X	X	X	X	X
SEAT	EUROPE				With CAN	2F-Digital TV		X	X	X	X	X
SEAT	EUROPE				With CAN	4D-Data Transfer		X	X	X	X	X
SEAT	EUROPE				With CAN	3E-Media Player 4		X	X	X	X	X

Mark X Description Function is supported.

SEAT	EUROPE				With CAN	7E-Ctrl Head Dash		X	X	X	X	X
SEAT	EUROPE				With CAN	4f-Centr. Electr. II		X	X	X	X	X
SEAT	EUROPE				With CAN	5D-Operations		X	X	X	X	X
SEAT	EUROPE				With CAN	5F-Information choice		X	X	X	X	X
SEAT	EUROPE				With CAN	6D-Trunk		X	X	X	X	X
SEAT	EUROPE				With CAN	6F-Centr. Conv. li		X	X	X	X	X
SEAT	EUROPE				Experts function	Instrument reset service						
SEAT	EUROPE				Experts function	SRS reset service						
SEAT	EUROPE				Experts function	Read PIN(II IMMO from Immobilizer box)						
SEAT	EUROPE				Experts function	Read PIN(II IMMO from Instrument)						
SEAT	EUROPE				Experts function	Read PIN(III IMMO from Engine)						
SEAT	EUROPE				Experts function	Odometer read and write(Passat 1.8 GSi)						